

Televes®



MOSAIO₆ 

Refs. 596101, 596111

EN Multi-touch Meter / Analyser

User manual

Index

Index	3	1.- Measurements	55
Safety requirements	4	2. Plans	56
Symbols and safety labels	4	3. SCR	58
Introducing the MOSAIQ	65	4. Quality profiles	58
Key features	5	5. User profiles	59
General Specifications	6	6. Antenna profile	59
Technical Specifications	7	7. Clone	59
Description of equipment components	9	8. Licenses	60
Connectors and controls	9	9. Remote control	60
Keyboard	9	10. Configuration	60
Power supply	10	Cloud Repository	60
About the battery	10	Error messages	62
Separately battery charge	11	Technical support	63
Gestures	12	Repair service	63
Before starting	12	Warranty	63
Icons on the screen	14		
Bottom bar	14		
Top bar	15		
Menus	16		
Top Menu	16		
Main Menu	16		
Options context menu	16		
Top menu	16		
Inputs/Outputs	16		
Powering	17		
Settings	17		
Main menu	19		
1. Settings	19		
2. User profiles	21		
3. Optical attenuation	22		
4. Satellite identification	23		
5. LTE check	24		
6. TV Analyser	25		
7. Spectrum analyser	40		
8. Radio Analyser	42		
9. Wi-Fi Analyser	46		
10. Network Tools	49		
11. Drive Test	51		
12. LOGS	54		
Web application	55		

Safety requirements

● Product inspection

- Inspect the equipment for shipping damage. Should any damage be discovered, immediately file a claim with the carrier.

● Read and Follow All Instructions

- All the safety and operating instructions should be read prior to and followed while operating this product.

● Do not obstruct the ventilation slots

● Cleaning

- Follow the cleaning instructions contained in the Maintenance section of this manual.

● Attachments

- Do not use attachments that are not approved by the product manufacturer

● Water and Moisture

- This product is splash water resistant but is not submersible.
- Do not place objects filled with liquids on or near the meter, such as glasses.

● Power Sources

- This product should be operated only from the type of power source specified (12VDC - 4A).
- Ensure that the voltage applied to the power connector does not exceed 15V. Higher voltages could damage the equipment
- Maximum consumed current: 4A

● Grounding or Polarization

- Do not bypass or defeat electrical plug polarization or grounding. Doing so will violate the warranty and may pose a risk of fire or electrocution.

● Wire Protection

- Ensure all connected wiring is routed correctly to avoid damage including pinching, excessive bends, or compression.

● Electrical Supply, Grounding, and Surge Protection

- Ensure that all local or national electrical codes are followed.

● Power Lines

- Always use caution and avoid operating this or any connected equipment near uninsulated power lines or any other hazards.

● Servicing

- There are no user serviceable parts except the battery pack. Do not attempt to service this product or remove covers. Refer all servicing to qualified service personnel. Follow the instructions in this manual when replacing the battery.

● Heat

- The product should be situated away from heat sources such as radiators, heat registers, stoves, or other products that produce heat..
- Do not place naked flame sources on the meter, such as lighted candles.

● Battery pack

- Battery must be replaced by the battery pack supplied by the manufacturer (ref. 596210) only. In no case the battery pack cover can be opened.
- This product should be operated only from the type of power source specified (12VDC - 4A).
- Ensure that the voltage applied to the power connector does not exceed 15V. Higher voltages could damage the equipment
- May explode if damaged or disposed of in fire or water

● Class

- Operation of this equipment in a residential environment may cause radio interference.

Symbols and safety labels



Recycle or dispose of used electronic devices properly.



The equipment contains a recyclable battery. Before depositing the equipment in the container of electrical and electronic equipment, you must remove the battery pack and deposit it separately for proper management



Battery can only be replaced by the battery pack supplied by the manufacturer (ref. 596210)


Overview

Introducing the MOSAIQ6

MOSAIQ6 is the new high-performance portable meter, with advanced features and high measurement accuracy. And all in the most automatic and intuitive way in the market, thanks to its intuitive interface and gestural commands.

With **MOSAIQ6**, technicians have a tool to measure, analyse and diagnose radio and TV signals in any scenario, no matter how complex.

MOSAIQ6 has an ultra-fast spectrum analyser with high accuracy, together with the echoes analysis features, allows to detect any important issue of the signal.

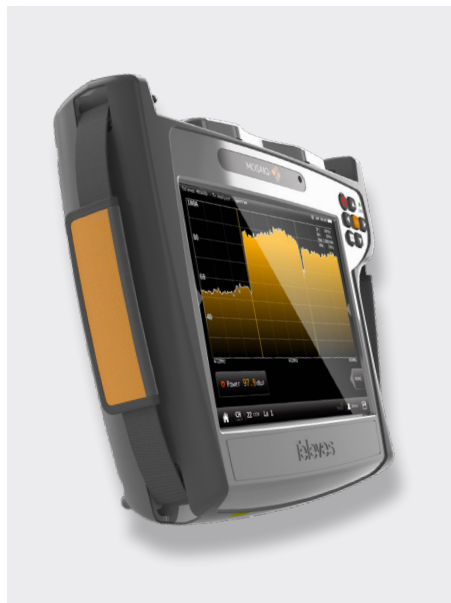

Key features

- **High performance portable meter**
- **Intuitive.** Thanks to its novel interface, designed to get the most out of its multi-touch 8" screen.
- **All the information about the signal in one screen.** Mosaic feature, with up to 6 widgets configurable by the user.
- **Powerful digital spectrum analyser** (scanning < 10ms.) 5MHz - 3.3GHz range.
- **Easily updateable**
- Spectrum analyser with **selectable span**
- **Specific measurements over IP** (TSolP)
- **PASS/FAIL indicators:** Icons indicate if a measurement is good, bad or in the warning zone for quick and easy status check. Reduce installer entry errors and improve decision making.
- **Field-swappable** and separately rechargeable **battery**
- **User profiles** customization
- Automatic **channel scan**
- Automatic **satellite identification**
- **GPS for drive test** and automatic saving of measurements
- **LTE interferences** detection and simulation

General Specifications

Display	8" Touch Screen TFT 1024x768 Full Colour
Weight	2150g
Dimensions	250x210x60 mm (H x W x D)
Power supply	Input: 100-240V~ 50-60Hz Output: 24VDC, 4A
Battery	Li-ion (7,2VDC, 9000mAh). Field-swappable
Operating time	> 4 hours
Operating temperature	-5°C to 45°C (23°F to 104°F)
Storage temperature	-20°C to 70°C (-4°F to 158°F)
Humidity	5% to 95% without condensation
Interfaces	ETH, USB, HDMI, Audio Out (Jack), FC/APC optical fibre connector, GPS antenna connector
Storage	32 Gb

Technical Specifications

Frequency	
Range	5 - 3300 MHz
Accuracy	1 kHz
Tuning	Frequency or channel
Input	
Impedance	50 Ohm
Spectrum Analyzer	
Span	100 KHz, 1, 5, 10, 20, 50, 100, 200, 500 MHz, 1.0, 2.0 and 3.3 GHz. Other (any value between 100 KHz and 3.3 GHz)
RBW	500 Hz, 1, 3, 5, 10, 30, 50, 100, 300, 500 KHz, 1, 3, 5 MHz
Marks	Up to 4, with delta feature
Event trigger	✓
Waterfall	✓
Hold feature	Maximum and minimum
Reference level	Automatic and manual
Digital measurements DVB-T	
Modulations	COFDM (QPSK, 16QAM, 64QAM)
Power	20 - 128dBuV
CBER	9.9E-2 - 1.0E-6
VBER	1.0E-3 - 1.0E-8
MER	Up to 40dB
C/N	Up to 52dB
Echoes	✓
MER by carrier	✓
Constellation	✓
Uncorrected packets	✓
TILT	✓
Attenuation	✓
Digital measurements DVB-T2	
Modulations	COFDM (QPSK, 16QAM, 64QAM and 256QAM)
Power	20 - 128dBuV
LDPCBER	9.9E-2 - 1.0E-6
BCHBER	1.0E-3 - 1.0E-8
Link Margin	Up to 30dB
MER	Up to 40dB
C/N	Up to 52dB
Echoes	✓
MER by carrier	✓
Constellation	✓
Uncorrected packets	✓
TILT	✓
Attenuation	✓

Multiple PLP	✓
Digital measurements QAM (Annex A/B/C)	
Modulations	4QAM, 16QAM, 32QAM, 64QAM and 256QAM
Power	20 - 128dBuV
BER	1.2E-3 - 1.0E-8
MER	Up to 40dB
C/N	Up to 52dB
Constellation	✓
Uncorrected packets	✓
TILT	✓
Attenuation	✓
Digital measurements ISDB-T/Tb	
Modulations	DQPSK, QPSK, 16QAM and 64QAM
Power	-100 dBm to 20 dBm
C/N	Up to 50 dB
MER	Up to 40dB
Pre-BER (by layer)	1.0E-2 - 1.0E-6
Post-BER (by layer)	9.9E-2 - 1.0E-8
Echoes	✓
Constellation	✓
Uncorrected	✓
TILT	✓
Attenuation	✓
Digital measurements DVB-S	
Wideband (only compatible HW)	230-2300 MHz
Power	20 - 128dBuV
CBER	9.9E-2 - 1.0E-6
VBER	1.0E-4 - 1.0E-8
MER	Up to 20dB
C/N	Up to 30dB
Constellation	✓
Uncorrected packets	✓
TILT	✓
Attenuation	✓
Digital measurements DVB-S2X	
Wideband (only compatible HW)	230-2300 MHz
Modulations	QPSK, 8PSK
Power	20 - 128dBuV
Link Margin	Up to 10dB
MER	Up to 20dB
C/N	Up to 30dB
LDPCBER	9.9E-2 - 1.0E-6
BCHBER	9.9E-2 - 1.0E-8


Specifications are subject to change without notice.

Constellation	✓
Uncorrectedpackets	✓
TILT	✓
Attenuation	✓
Multi TS	✓
PLS scrambling	✓
Digital measurements DVB-S2	
Wideband (only compatible HW)	230-2300 MHz
Modulations	QPSK, 8PSK, 8APSK, 16 APSK & 32 APSK
Power	20 - 128dBμV
Link Margin	Up to 10dB
MER	Up to 20dB
C/N	Up to 30dB
LDPCBER	9.9E-2 - 1.0E-6
BCHBER	9.9E-2 - 1.0E-8
Constellation	✓
Uncorrectedpackets	✓
TILT	✓
Attenuation	✓
Multi TS	✓
FM Measurements	
Level	✓
C/N	Up to 52dB
RDS	✓
DAB/DAB+ Measurements (Option 596204)	
Power	De 20 - 128 dBμV
MER	Up to 20 dB
C/N	Up to 30 dB
BER	9.9E-2 – 1.0E-6
Analog Measurements (Option 596203)	
Level	20 - 128dBμV
V/A	Up to 52dB
C/N	Up to 30dB
Features	
Up to 6 widgets user-customizable	✓
System Scan with measurements and learning plan	✓
LTE check (4G/5G)	✓
FO (-40, 7 dBm)	Option 596101
FO Selective (-40, 7 dBm)	Option 596111
GPS Drive Test	Option 596201
MPEG2, MPEG4 Full HD Channels visualization	✓
4K visualization	Option 596205


Info MPEG	SID, VID, AID, Resolution, Profile , Audio Bitrate, Video Bitrate, Resolution info
IPTV Analyzer	✓
Wifi Analyser	2,4 GHz and 5 GHz (Option 596202)
Units	dBμV, dBmV, dBm
Network Tools	✓
Preamp powering	
Preamppowering	5,13, 18, 24Vdc and other (any value between 5 and 24V)
Maximum supplied power	12 W
Maximum supplied current	900 mA
LNB Tone	22 KHz
DiSEqC	✓
SCR dCSS (EN50494 EN50607)	✓

Description of equipment components

Connectors and controls

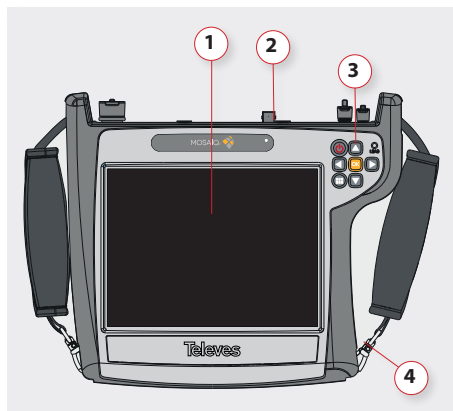


- 1. Touch screen 8"
- 2. Connectors
- 3. Keyboard and LED indicators
- 4. Battery (on the back)

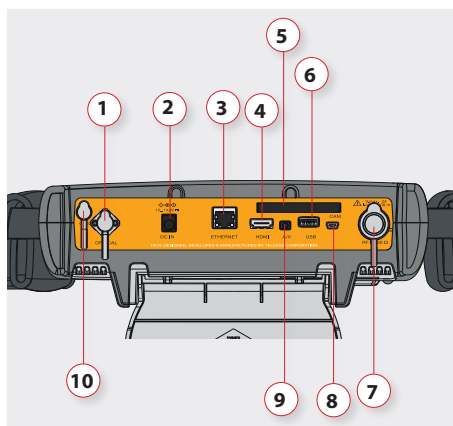

- 1. F.O.
- 2. Power connector
- 3. ETHERNET
- 4. HDMI
- 5. CAM
- 6. USB
- 7. RF Input
- 8. USB
- 9. A/V
- 10. GPS


Keyboard

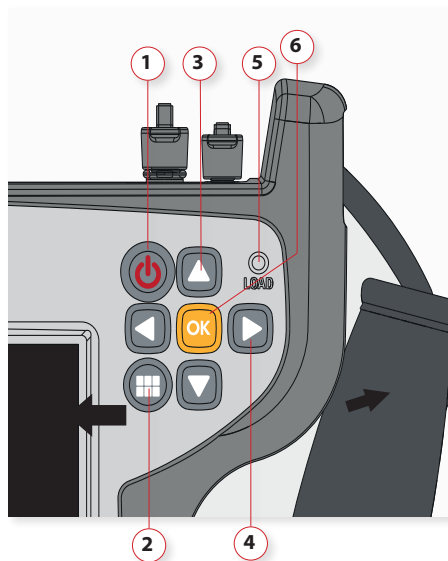

- 1. **Device ON/OFF button:** To turn the equipment off, press and hold for approximately 3 seconds. Short press to lock/unlock the screen.
- 2. **Menu button:** First press-features menu is shown. Second press-context menu is shown. Third press-all menus are hidden.
- 3. **Up/Down buttons:** Changes channel.
- 4. **Left/Right buttons:** Changes screen in multi-screen features.
- 5. **Powering LED:** Indicates if the equipment is powering an external load.
- 6. **OK button:** Short press to accept an option, and press and hold for more than 10 seconds to reset the device.

Power supply

A DC adapter is provided to power and charge the meter. Plug the adapter into a properly grounded electrical supply and the power connector on the side of the unit.

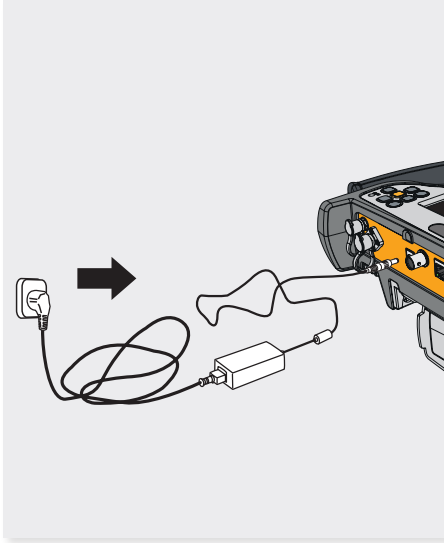

When external power is supplied, the battery management system automatically controls the charging process.

A battery icon indicates the charge status of the battery.

When the battery is fully charged, the battery icon is completely filled. As the battery discharges, the amount the icon is filled decreases in steps.

From a fully discharged state, a full charge takes approximately between 3 and 4 hours. And a 1 hour charge will provide battery for around two working hours.

The charge management system will detect various conditions preventing charging, such as a battery that is over a safe temperature.

About the battery

Important:

If the equipment is going to be stored for a while, it is recommended to take the battery off and store them both separately.


To maximize battery life:

- ▶ Allow fully discharging the battery.
- ▶ The battery can be charged correctly attached to the device and using the supplied DC adapter. Or separately using the DC adapter supplied with the MOSAIQ6.
- ▶ For long term storage, take the battery pack off, and keep the device and the battery pack separately at room temperature, or about 25° C. Start with a charged battery and re-charge the battery every 2 to 3 months.


Battery replacement:

It is recommended to use only the battery packs supplied by the manufacturer to replace the battery, following these instructions:


- ▶ Disconnect the meter from the power supply:

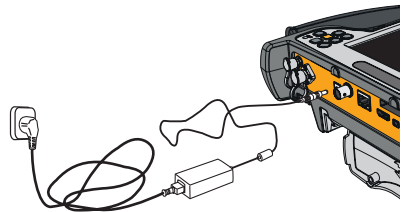


- ▶ Turn the MOSAIQ6 off:

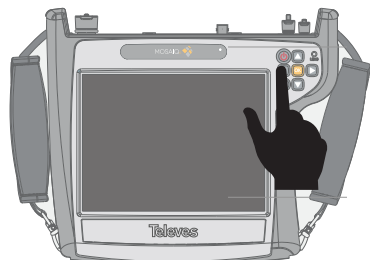


- The battery pack is placed in the bottom-back side

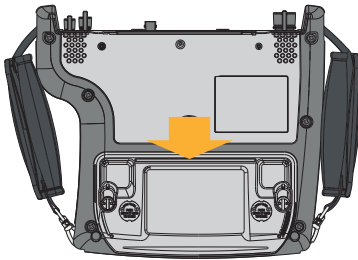

- Lift the fixings washers and rotate them 90°. You'll notice that the fixings get out automatically allowing to remove the battery pack

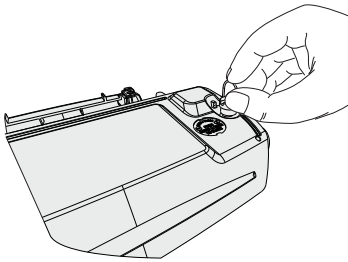

- Put the new battery pack and rotate the fixings washers again until the fixings fit into the device

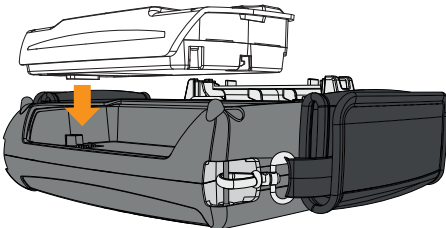

- Turn you MOSAIQ6 on

Important: never remove the battery as long as your meter is on

Separately battery charge

The battery can be charged separately from the meter using the DC adaptor supplied with the MOSAIQ6. Plug the adaptor into a properly grounded electrical supply and the power connector on the side of the unit.

The flashing light indicates that the battery is being charged.

If the battery charge is less than 30% the light is red.

If the battery charge is between 30% and 60% the light is yellow.

If the battery charge is greater than 60% the light is green.

Gestures

MOSAIQ6 has an innovative interface, exclusively designed to get the most out of its 8" multi-touch display.

To do this, MOSAIQ6 uses some gestural commands that are explained below:



Tap: one fast touch with one finger.



Double tap: two fast consecutive touches with one finger.



Swipe: short swipe with one finger.



Drag: drag with one finger.



Pinch/Spread: pinch/spread two fingers on the screen.



Drag and drop.

Before starting


The first time you turn your MOSAIQ6 on, please follow the next steps for a proper registration. To do that, you must be registered on the Televés website (www.televés.com).

In addition, you need internet connection (Ethernet or Wi-Fi). Then, please follow the next steps that will be shown on the screen :

1.- Choose the language




2.- Select the internet connection (Ethernet or Wi-Fi):

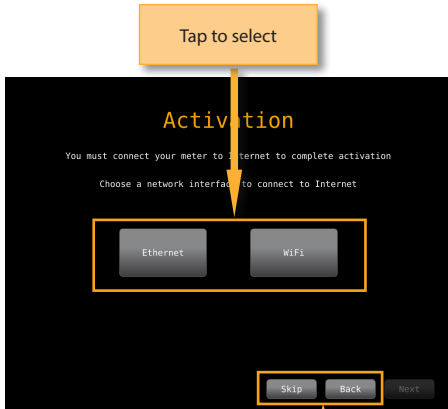

Skip: cancel the registration. If you skip, you will be prompted to register your meter each time you turn it on
Back: back to previous step
Next: goes to the next step

3.1- If you select Ethernet, all the parameters will appear on the screen: you can enable DHCP mode (the meter will select all the parameters automatically), or disable it (then you must enter all the network parameters)

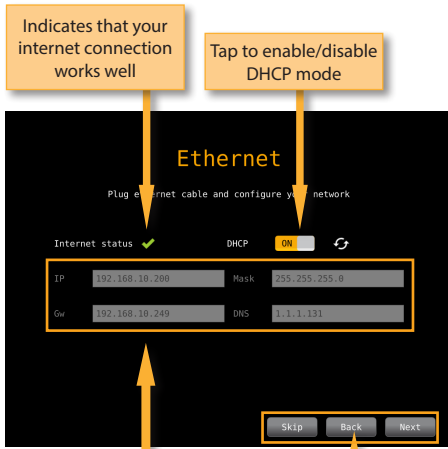

Skip: cancel the registration. If you skip, you will be prompted to register your meter each time you turn it on
Back: back to previous step


3.2- If you select Wi-Fi, a list with all the Wi-Fi networks will appear on the screen. You must select one of them to access the internet.

4- When your MOSAIQ6 is connected to the internet, you have to enter you Televés account data (e-mail and password).



Skip: cancel the registration. If you skip, you will be prompted to register your meter each time you turn it on
Back: back to previous step
Next: goes to the next step

5.- Your MOSAIQ6 is registered!:

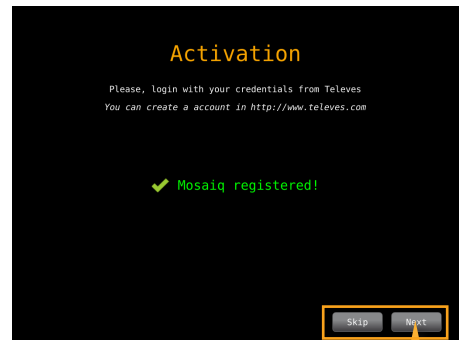

Skip: cancel the registration. If you skip, you will be prompted to register your meter each time you turn it on
Next: goes to the next step

6.- The last step is to enter an alias for your MOSAIQ6, this name will be saved in our database:

Enter an alias for your meter

Alia

Please, select an alias for this meter

Alias EQUIPO SANTIAGO

Skip Next

Skip: cancel the registration. If you skip, you will be prompted to register your meter each time you turn it on

Next: goes to the next step

Icons on the screen

There are always two bars on the screen : one on the top and one on the bottom. The icons in them will be explained bellow.

Bottom bar:

Tap to direct access to TV Analyser feature

Tap to save LOG

Tap to change tuned Channel/frequency

Tap to change selected profile

Tap to change selected service

Tap to change Band

Tap to change channel-tuning frequency tuning

Tap to create MACROLOG

- Direct access to TV Analyser feature: see section 6.- *TV Analyser*.

- Change channel/frequency: allows you to select another channel (if it is selected channel tuning model) from the channel plan corresponding to the selected user profile, or another frequency (if it is selected frequency tuning mode). See section 2.- *User profiles*.

If it is selected the channel tuning mode, a pop-up window will show all the channels of the channel plan of the user profile (if you haven't do a sccan -see section 6.1.- *Scan*-) or a list with the channels found after having made a scan and saved the plan. In the top right side of the channel list, you can see a pencil icon, if you tan on it you can edit the channel list of channels (add or remove channels).

- Change selected service: it allows the user to select any other service locked previously. This feature shows a pop up window with all the services that the user has selected previously in any channel.

Tap on the star to bookmark your favorite services. The favourite services are always in the top of the list

Sort the list by name or by LCN




If the selected service is in a channel different from the tuned, the MOSAIQ6 will tune the new channel and select the service automatically

Delete a service from the list

- Change band: see section 2.- *User profiles*
- Change profile: changes the user profile. See section 2.- *User profiles*
- MacroLOG: allows you to schedule repetitive measures in time intervals selected by the user. See section 9.- *LOGs*
- LOG: saves the measurements and the screenshot at that moment. See section 9.- *LOGs*

Top bar:

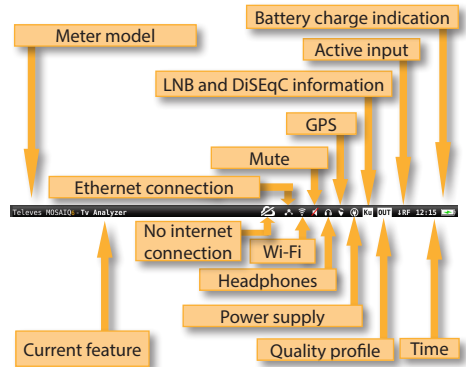

EN

•Conexion to the network: indicated that the meter is connected to the network by Ethernet. See section *Settings-Network* in *Top Menu*

•Wi-Fi: indicates that the meter is connected to a Wi-Fi network. See section *Settings-Wi-Fi* in *Top Menu*

•GPS: indicates that the GPS is active. While the satellite data is not received, the icon blinks. See section *Settings-GPS* in *Top menu*. To perform a Drive-Test the GPS must be active, and then schedule a MacroLOG (see icons in the Bottom bar). The results of the Drive Test are shown in the web application. See section 1.- *Measurements* in *Web application*.

•LNB and DiSEqC information: shows information about the LNB band (only if real frequency is selected -see section 1.2.- *Measurements* of the menu 1.- *Settings*-), as well as about DiSEqC if it is active. See section 2.- *User profiles*

•Quality profile: indicates the selected quality profile. To select another quality profile, access the *options context menu* of the feature. See section *Options context menu* in *Menus*. To add new quality profiles see section 5.- *Quality profiles* in *Web application*.

•Enabled input: See section *Inputs/Outputs* in *Top menu*.

•Time: see section *Regional* in the feature 1.- *Settings*

Menus

The MOSAIQ6 has 3 different menus. These menus will be explained in this section briefly, as well as their locations. All their features will be explained in the sections below.

Top Menu



To access this menu you must do a short swipe in the top central part of the screen. The features of this menu allows us to set up certain aspects of the meter in a fast way and from any feature.

Main Menu



To access this menu you must do a short swipe in the right central part of the screen. The main menu is wheel with all the features of the meter. Doing long swipe on the wheel, the user can access every features. To select a feature, you must tap on the corresponding icon.

Options context menu



Most of the features of the main menu have a menu with some options that pertain exclusively to that feature. These options are in a context menu that appears when the user does short swipe in the left central part of the screen.

Top menu

This menu has several tabs that will be explained below. To select one of them, the user must tap on the title.

Inputs/Outputs:

Doing tap on the connector draw, the corresponding input/output will be enabled/disabled. Once it is enabled, the user must set some options depending on the kind of input.

Enabled input

Inputs are green and outputs are blue


Select the setup options doing "tap"

If you select CAM input, please wait a few seconds until the MOSAIQ6 detects the CAM. Then you can access to the MMI menu of the CAM:

Tap to access to the MMI Menu

Powering:


Allows setup the preamplifiers powering.

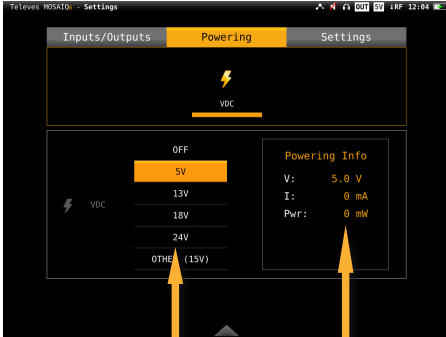

Select doing "tap"

Consumption information

•**Volume:** increases/decreases the volume

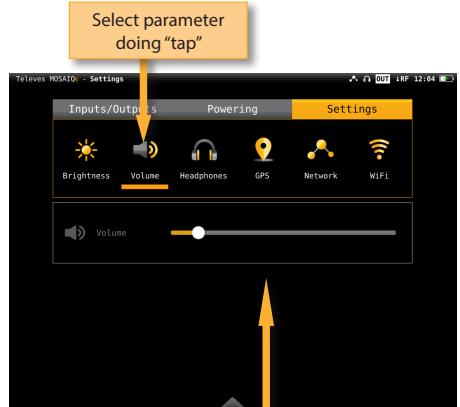


Increases/Decreases doing "drag"

EN

Settings:


The user can set the following parameter from this menu:

•**Brightness:** increase/decrease the display brightness

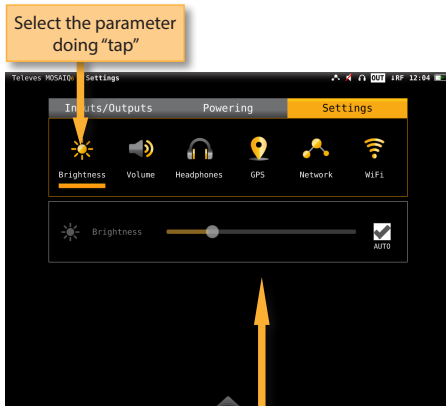


Increase/decrease doing "drag"

•**Touch:** increases/decreases the touch control sensitivity

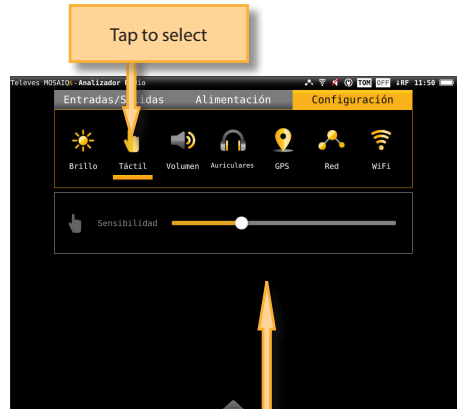


Drag to increase/ decrease


•**Headphones:** enables/disables audio A/V output

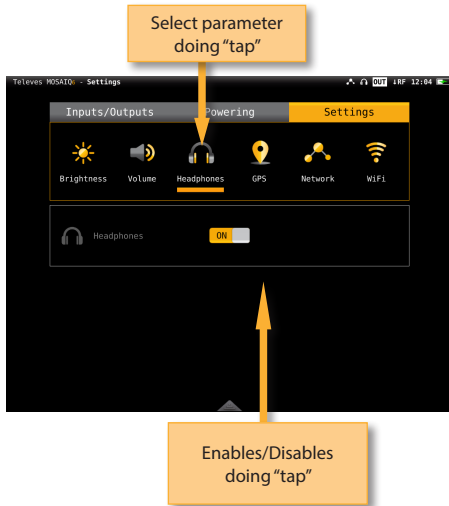

mode (DHCP ON), the network parameters will be configured automatically. If the DHCP mode is off, the user must type all the network parameters (IP, Gateway, Mask and DNS), and the do tap in "Apply".

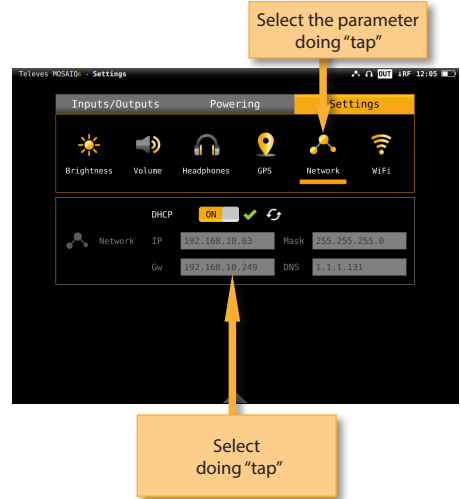

•**GPS:** Enables/disables the GPS feature. When it is enabled, the corresponding icon appears on the top bar of the screen. While the MOSAIQ6 does not receive the satellite signal, the GPS icon will blink.

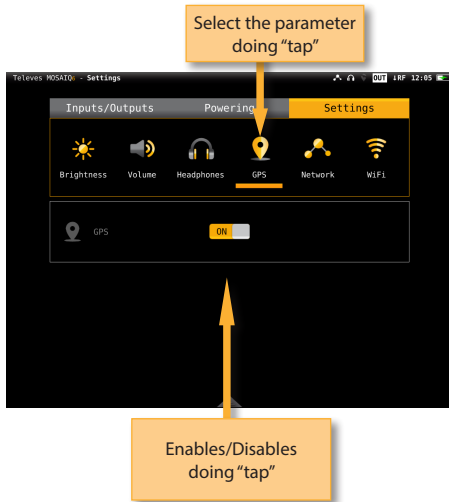

•**Wi-Fi:** enables/disables the equipment Wi-Fi connection.



•**Network:** Allows to set up the equipment network connection. If the user selects the DHCP

Main menu

All the MOSAIQ6 features are contained in this menu, and they will be explained in the following sections.



1. Settings

Allows set all the global parameters of the meter. This feature has several tabs that will be explained below:

1.1.- Regional

Sets the language, the date and the time.



1.2.- Measures

Allows to set up those parameter that are commons to all the measurements: units, frequency (if real frequency is nos checked, the meter will use IF) and LNB.



1.3.- Energy


Allows set the energy-saving modes. Select the downtime until equipment auto suspension, and the downtime until auto shutdown.



1.4.- Update

When the MOSAIQ6 is connected to the internet (via Ethernet or Wi-Fi) it is automatically detected if a new firmware version is available. If so, tap on the Update button and your MOSAIQ6 will be automatically updated.

Be aware that the meter must be connected to the external powering to be updated.

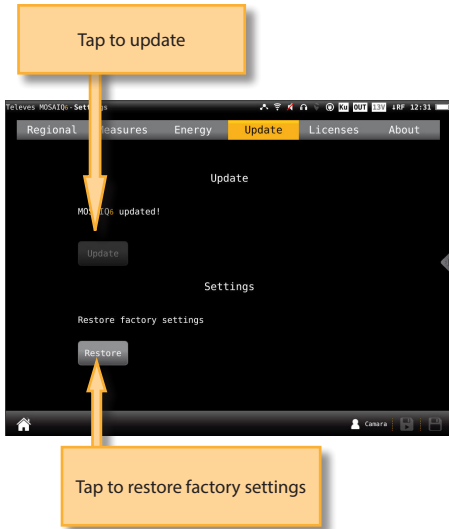

You can also update your device using an USB stick. To do that, save the update file in an USB stick and insert the USB stick into the USB connector of your MOSAIQ6. A message appears automatically indicating that an update is available on the USB. When you go to the Update menu, the following screen will appear:




1.5.- Licenses

Shows a list with all the licenses of your MOSAIQ6.



1.6.- About

Shows all the information about your equipment, both hardware and software.

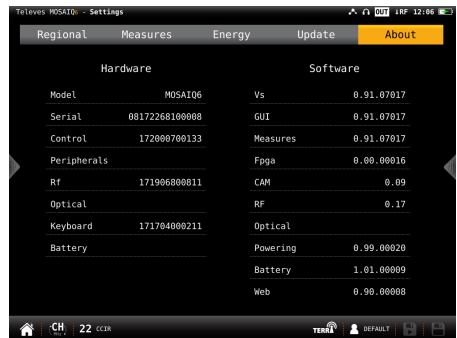



2. User profiles

Your **MOSAIQ6** allows to define as many user profiles as you need. For each user profile, you must indicate what band(s) is going to measure that user profile and the main parameters.

If you select terrestrial band for a profile, you must select the channel plan, the preamplifiers powering and the norm.

If you select satellite band for a profile, you must select the channel plan, polarity, powering, SCR and DiSeqC.

If you select the radio band, you must select the DAB channel plan.



List of profiles
Tap to select

Selected profile setting

Tap to select the action

you must select the bands you want to include in that profile and set up the parameters.

To select a band, you must select the corresponding check box. The first step is the terrestrial band, then tap on "Next" button pass to the satellite band, and finally the radio band.

Once you have finished the radio band configuration, tap on "add" button to save the user profile.



Tap to select/deselect the band

Type the new profile name

Tap to dropdown the list and select the parameter from it

Tap to cancel

Tap to continue to the next band

2.1.- Set

Goes to the setting feature of the main menu (see section 1.- Settings)

2.2.- Add

Adds a new user profile. When you tap on this button, a popup window will open where the user must set all the required parameters.

First of all, you must type the profile's name. Then

If you include the satellite band in the profile, you must select how many satellites you want to include in that profile. Then you must set all the parameters for each one.

Each satellite plan is automatically associated with a DiSeqC command (first plan with SAT A, second plan with SAT B, and so on). So, the powering is always ON and automatically set to AUTO, but the user can select any other value.

Tap to select/deselect the band

Select the number of satellites

Configure all the necessary parameters for each satellite

Tap to continue to the next band

Tap to cancel

The screenshot shows a 'Profile' configuration screen with the following settings: Satellite checked, Num. Sats: 2, # DISEqC: 1, Plan: Eutelsat3, Polarity: ALL, Vcc: AUTO, 2: Asyria19, Polarity: ALL, Vcc: AUTO, SCR: OFF, D/3S: checked, and D/4S: checked. Navigation buttons 'Back', 'Next', and 'Cancel' are at the bottom.

2.3.- Edit

Allows changes in the selected profile of the list.

The process is similar to add a new profile.

2.4.- Delete

Deletes the selected profile from the list.



3. Optical attenuation

This feature allows to measure the optical attenuation in the fibre network in three wavelengths: 1310nm, 1490nm and 1550nm. When the user selects this features, the optical fibre input is automatically enabled.

3.1.- Main window:

Bar graph that represents the attenuation of each wavelength

Enabled O.F input icon

List with the measurements in each wavelength: attenuation, power and reference

Tap to select

The screenshot shows a bar graph with three bars for 1310 nm, 1490 nm, and 1550 nm. Below the graph is a table with the following data:

λ(nm)	Attenuation (dB)	Power (dBm)	Reference (dBm)
1310	0.4	-74.6	-74.6
1490	0.4	-75.7	-75.3
1550	0.5	-75.7	-76.2

3.2.- Options context menu:

The screenshot shows an 'OPTIONS' menu with a 'Calibrate' button and a 'Units' dropdown set to 'dBm'. Below the menu is a bar graph showing attenuation for 1490 nm and 1550 nm. A table below the graph shows the following data:

Attenuation (dB)	Power (dBm)	Reference (dBm)
0.1	-74.3	-74.4
0.3	-75.4	-75.3
0.4	-76.3	-76.2

•Calibrate: select the wavelength (tap on the graphic or on the list) and tap on this button to calibrate it.

•Units: mW/μW, dBm.




4. Satellite identification

This feature is able to detect automatically the satellite the input signal belongs to.


4.1.- Main window

The Mosaiq6 adjusts automatically all the parameters of the spectrum

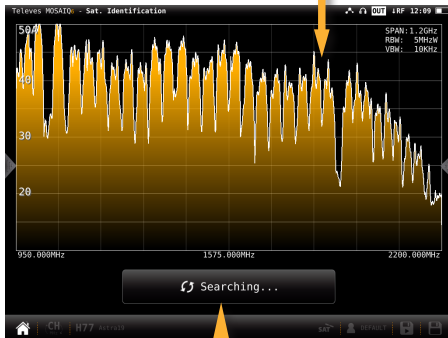

Once the satellite is identified, the name is shown in the display

4.2.- Options context menu

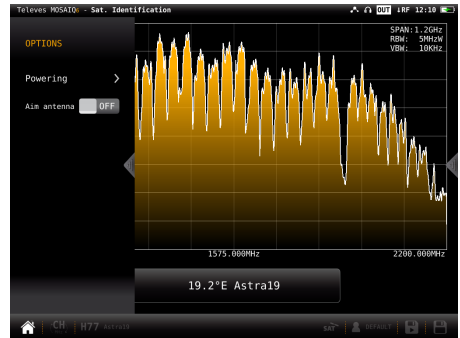

•Powering:

- VDC: Selects the preamplifier powering.
- DiSEqC (only satellite band): selects the DiSEqC parameter (Sat A, Sat B, Sat C, Sat D).
- Positioner (only satellite band): makes it possible to control the DiSEqC motors used to move mobile parabolic antennas. This function is available in satellite mode and when the equipment is powering the LNB.

Halt: This command stops the motor movement.

East: Allows to move the motor in the EAST direction. Each click corresponds to one step in the movement of the motor (pitch motors). By holding the key down, successive movement sequences will be executed until the key is released.

West: Motor movement in the WEST direction. Each click corresponds to one step in the movement of the motor (pitch motors). By holding the key down, successive movement sequences will be executed until the key is released.

Store: 8 storage positions are available to store at up to 8 antenna positions . This command allows one of 8 positions to be chosen where the current position of the antenna will be stored.

Goto: recovers one of the 8 positions for the antenna that has been previously stored

- SCR (only satellite band): Selects the SCR parameters (multiswitch, standard and slots) When a slot is enabled (for example

slot 3, freq. 1210MHz), the meter will tune into the slot frequency (1210MHz) and will set the slot with the meter parameters: frequency, band (powering), and DiSEqC. In addition, a SCR icon will be shown in the bar at the top (SCR3) to indicate that the slot is enabled. While the slot is enabled, all the setting changes of the meter, will be applied to the currently slot (SCR3).

•Aim antenna:

Emits a modular audible signal with frequency directly proportional to signal level in the spectrum trace relative to reference level. It is recommended to set the reference level manually, as well as to select the span to include a frequency range wide enough. The audible signal becomes continuous when the signal level is close to the reference level. Then it is necessary to increase the reference level to get a more accurate adjustment. This is a useful feature to point antennas without having to look at the display




5. LTE check

The presence of signals in 4G and 5G bands in distribution systems DTT, can affect the quality of the TV signal.

This function makes an analysis of the 4G and 5G signals and its influence on digital terrestrial television signal (UHF band), and it also estimates the need to insert a filter at the input of a Digital Terrestrial Television (DTT) system, in order to minimize interferences that may cause the signal on the DTT signal.

When you select this function, only the 4G Downlink and the 4G Uplink bands are analysed. You must display the Options Context Menu to analyse the 5G band.

5.1.- Main window

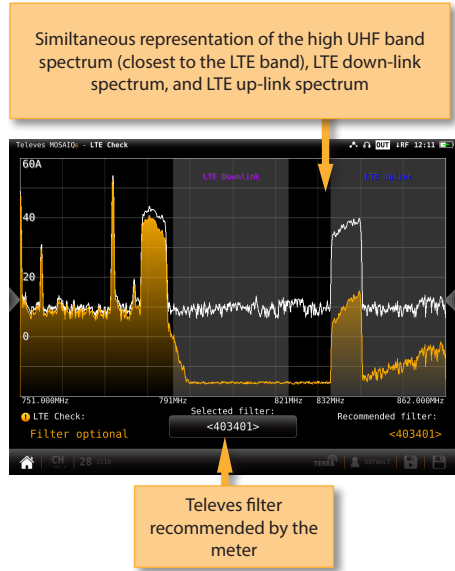

If it is necessary to insert a filter, is indicated on the screen.


If it was not necessary to insert a filter, it will be displayed the text "LTE Check OK" instead of "Required LTE filter".

On the screen are displayed simultaneously: 1- The spectrum of the high "UHF" band (closest to the LTE band); 2- The spectrum of the LTE down-link; 3- And the spectrum of the LTE up-link.

In addition to the recommended filter, you can select various filters Televés LTE and display the simulation of how the system would respond with a LTE filter inserted on its input (orange graphic). Use the rotary selector to choice each one of the available filters.

The selected filter is displayed in the bottom center of the screen, there is also the option of not selecting a filter.

5.2.- Options context menu

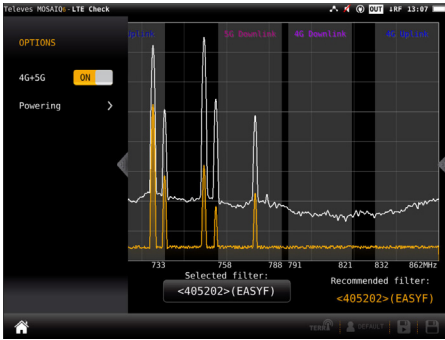

•4G+5G: ON/OFF. When ON is selected, the function analyses the 4G up and down links, as well as the 5G up and down links, detecting possible interfering signals and, if it is necessary it recommends a filter.

•Powering:

- VDC: Selects the preamplifier powering.

Bellow there is a detailed explanation of each of these screens:

6.1.- Scan

This function scans the selected channel plan and detects every existing analog and digital channel in real time to determine the overall frequency response of the system.

The scan measurement leverages the location based thresholds to clearly show whether or not signal levels comply with the cable system's specifications with their green, yellow and red bars.

6.1.1.- Main window

Bar graph representing all the found channels

Banda Tap to select

Tap to access to the options menu


Signal spectrum

List with channels and measurements

CH	Freq (MHz)	Type	Puri (dBuV)	C/Ni (dB)	VA/MEI (dB)	CBER
22	482.000	D3T	57.6	40.2	29.8	3.6E-3
23	499.000	D3T	48.7	26.5	23.8	4.5E-3
24	498.000	D3T	63.7	42.8	35.9	-1.0E-6
26	514.000		64.0	42.2		
28	530.000	ANALOG	55.5	36.9	>30.0	



6. TV Analyser

This is the main function of the **MOSAIQ6**. The user can reach this function by tapping the icon .

Thanks to this feature it is possible to have in one screen all the information of the tuned signal.

The feature TV Analyser has 3 screens: Scan, Mosaic 3+1 & Mosaic 6. To switch between screens do long swipe.



Tapping on the icon  a popup window will appear showing the following functions:

Selected channel
Change tapping on the bar graph or on the channel table

Band
Tap to select

Channel table with found channels
Vertical drag to see them all

Options buttons (tap)

- Start: Starts a new system scan
- Options:
 - Fast: ON/OFF. When the fast scan is enabled (ON), the meter will not make CBER and VBER measurements for digital channels, neither V/A measurements for analog channels. So, only power and level measurements will be shown.
 - Wide outlet: ON/OFF. Enable this option when the outlet in your installation has both terrestrial and satellite bands. So, both bands will be scanned consecutively. If this options is disabled, only the selected band will be scanned.
Note: Note that if the selected user profile does not allow to make measurements in some bands, the scan will not be done in that band.
- Edit: Allows to add/delete channels from the plan. If the channel is selected (orange coloured), when you tap on it, it will be deselected. Otherwise, if the

channel is unselected (grey coloured), when you tap on it, it will be selected.

- Save: Saves a new plan with the found channels.
- Cancel: Closes the options window.

6.1.2.- Options context menu

Fast OFF

Wide Outlet OFF

Show All ON

Full Span OFF

Tilt >

Attenuation >

Quality Profile >

Powering >

- Fast: ON/OFF. When the fast scan is enabled (ON), the meter will not make CBER and VBER measurements for digital channels, neither V/A measurements for analog channels. So, only power and level measurements will be shown.
- Wide outlet: ON/OFF. Enable this option when the outlet in your installation has both terrestrial and satellite bands. So, both bands will be scanned consecutively. If this options is disabled, only the selected band will be scanned.
Note: Note that if the selected user profile does not allow to make measurements in some bands, the scan will not be done in that band.
- Show all: ON/OFF. When show all is ON, all the measurements of all the channels are shown. When it is OFF, you can only see the measurements of the channel that is being measured in that moment.
- Span full: ON/OFF. When Span full ins ON you can see all the bars corresponding to all the found channels. When this option is OFF, only 24 bars are shown, so it is necessary to scroll to see them all.
- Tilt: ON/OFF. When the tilt option is ON, this function measures the tilt between the channels indicated in the labels CH A and CH B. Then you can see a white

line between these two channels and the tilt measurement on it.

•Attenuation: ON/OFF. When the attenuation option is ON, the MOSAIQ6 measures the attenuation of the installation relative to a reference point, usually the head-end output. So, the first thing you must do is connect the meter to the reference point and tap on the Calibrate button. In this way, the equipment will measure and save the level of all the channels.

Then you must go to all the pints of the installation where we want to measure and connect the meter, taking care to have this function ON. The MOSAIQ6 will measure the levels of all the channels comparing them with the reference ones.

When this option is ON, the bars of the graphic don't represent the level or the power of the channels, but the attenuation of each one of them. The list shows power (or level) and C/N. In addition, a green trace is shown in the spectrum. This trace indicates the levels in the reference point.

•Quality profile: allows to select the quality profile .

•Powering:

- VDC: Selects the preamplifier powering.
- DiSEqC (only satellite band): selects the DiSEqC parameter (Sat A, Sat B, Sat C, Sat D).
- Positioner (only satellite band): makes it possible to control the DiSEqC motors used to move mobile parabolic antennas. This function is available in satellite mode and when the equipment is powering the LNB.

Halt: This command stops the motor movement.

East: Allows to move the motor in the EAST direction. Each click corresponds to one step in the movement of the motor (pitch motors). By holding the key down, successive movement sequences will be executed until the key is released.

West: Motor movement in the WEST direction. Each click corresponds to one step in the movement of the motor (pitch motors). By holding the key down, successive movement sequences will be

executed until the key is released.

Store: 8 storage positions are available to store at up to 8 antenna positions . This command allows one of 8 positions to be chosen where the current position of the antenna will be stored.

Goto: recovers one of the 8 positions for the antenna that has been previously stored

- SCR (only satellite band): Selects the SCR parameters (multiswitch, standard and slots) When a slot is enabled (for example slot 3, freq. 1210MHz), the meter will tune into the slot frequency (1210MHz) and will set the slot with the meter parameters: frequency, band (powering), and DiSEqC. In addition, a SCR icon will be shown in the bar at the top (SCR3) to indicate that the slot is enabled. While the slot is enabled, all the setting changes of the meter, will be applied to the currently slot (SCR3).

6.2.- Mosaiq 3+1

This screen has 4 widgets, 3 in the top of the screen and one in the lower part of the screen. These widgets are user-configurable, that is, the user can select the function he or she wants to visualize in each widget.

6.2.1.- Main window


The screenshot shows the MOSAIQ Analyzer interface with the following components and callouts:

- Television widget:** Shows a picture of a building. Callout: "Tap on the title bar of the widget to change the function".
- Measures widget:** Displays DVBT metrics: Power (57.0 dBµV), C/N (36.6 dB), MER (35.0 dB), CBER (1.2E-6), and VBER (<1.0E-8). Callout: "Double tap to see the function in full screen".
- Services widget:** A pie chart showing signal distribution: 18%, 13%, 19%, 8%, 26%, and 17%. Callout: "Double tap to see the function in full screen".
- Spectrum widget:** A frequency spectrum graph from 472.000MHz to 492.000MHz. Callout: "Swipe on the spectrum to change the channel".

At the bottom, the status bar shows: CH 22 ccr La 2 HD, YEM, and DEFAULT.

All the available features are explained in section 6.4.- Features.

6.2.2.- Options context menu:

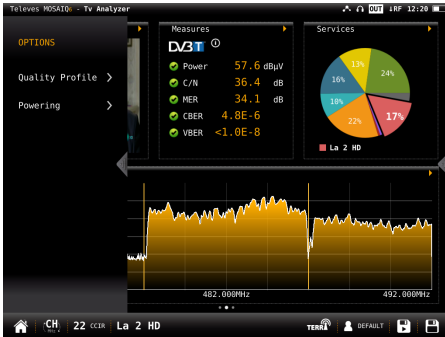

- Quality profile: allows to select the quality profile
- Powering:
 - VDC: Selects the preamplifier powering.
 - DiSEqC (only satellite band): selects the DiSEqC parameter (Sat A, Sat B, Sat C, Sat D).
 - Positioner (only satellite band): makes it possible to control the DiSEqC motors used to move mobile parabolic antennas. This function is available in satellite mode and when the equipment is powering the LNB.
 - Halt: This command stops the motor movement.
 - East: Allows to move the motor in the EAST direction. Each click corresponds to one step in the movement of the motor (pitch motors). By holding the key down, successive movement sequences will be executed until the key is released.
 - West: Motor movement in the WEST direction. Each click corresponds to one step in the movement of the motor (pitch motors). By holding the key down, successive movement sequences will be executed until the key is released.
 - Store: 8 storage positions are available to store at up to 8 antenna positions . This command allows one of 8 positions to be chosen where the current position of the

antenna will be stored.

- Gototo: recovers one of the 8 positions for the antenna that has been previously stored.
- SCR (only satellite band): Selects the SCR parameters (multiswitch, standard and slots) When a slot is enabled (for example slot 3, freq. 1210MHz), the meter will tune into the slot frequency (1210MHz) and will set the slot with the meter parameters: frequency, band (powering), and DiSEqC. In addition, a SCR icon will be shown in the bar at the top (SCR3) to indicate that the slot is enabled. While the slot is enabled, all the setting changes of the meter, will be applied to the currently slot (SCR3).

6.3.- Mosa iq 6

This screen has 6 widgets. These widgets are user-configurable, that is, the user can select the function he or she wants to visualize in each widget.

6.3.1.- Main window



All the available features are explained in section 6.4.- Features.

6.3.2.- Options context menu



- Quality profile: allows to select the quality profile
- Powering:
 - VDC: Selects the preamplifier powering.
 - DiSEqC (only satellite band): selects the DiSEqC parameter (Sat A, Sat B, Sat C, Sat D).
 - Positioner (only satellite band): makes it possible to control the DiSEqC motors used to move mobile parabolic antennas. This function is available in satellite mode and when the equipment is powering the LNB.

Halt: This command stops the motor movement.

East: Allows to move the motor in the EAST direction. Each click corresponds to one step in the movement of the motor (pitch motors). By holding the key down, successive movement sequences will be executed until the key is released.

West: Motor movement in the WEST direction. Each click corresponds to one step in the movement of the motor (pitch motors). By holding the key down, successive movement sequences will be executed until the key is released.

Store: 8 storage positions are available to store at up to 8 antenna positions. This command allows one of 8 positions to be chosen where the current position of the antenna will be stored.

Goto: recovers one of the 8 positions for the antenna that has been previously stored

- SCR (only satellite band): Selects the SCR parameters (multiswitch, standard and slots) When a slot is enabled (for example slot 3, freq. 1210MHz), the meter will tune into the slot frequency (1210MHz) and will set the slot with the meter parameters: frequency, band (powering), and DiSEqC. In addition, a SCR icon will be shown in the bar at the top (SCR3) to indicate that the slot is enabled. While the slot is enabled, all the setting changes of the meter, will be applied to the currently slot (SCR3).

6.4.- Features

This section explains all the features available to visualize in the widgets of the MosaIQ 3+1 and MosaIQ 6 modes.

Note: If the ASI input is selected, only Television and Services features will be available.


6.4.1.- Television

This feature allows to visualize the selected service's image of the tuned channel.

Note: When the image is not available, one of these icons will be shown:


- Only audio service 🎵
- Encrypted channel 🔒
- Data service 📄

6.4.1.1.- Main window

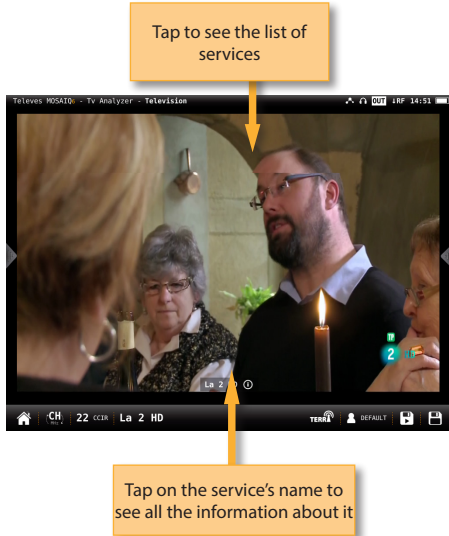


showing the available audios.

Tapping on the service's name, it appears a popup window with the information about it:

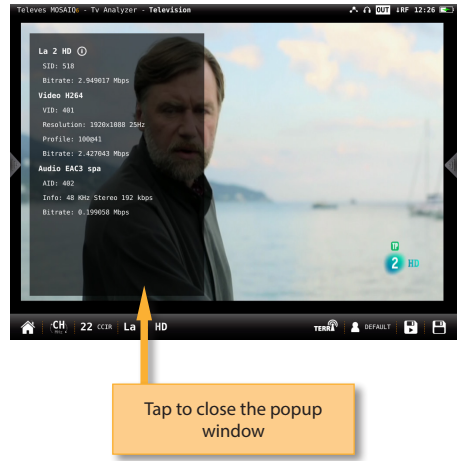

Tapping on the screen, it appears a popup window with the list of the channel's services:

6.4.1.2.- Options context menu

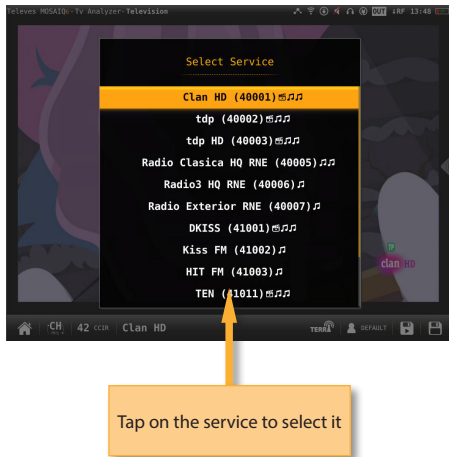

Next to the name of the service, the icons indicating the transports are shown (image, one or more audio transports). To change the audio, tap again on the screen and select the same service in the list, then a new pop-up window will appear

- Quality profile: allows to select the quality profile
- Powering:
 - VDC: Selects the preamplifier powering.
 - DiSeqC (only satellite band): selects the DiSeqC parameter (Sat A, Sat B, Sat C, Sat D).
 - Positioner (only satellite band): makes it possible to control the DiSeqC motors used to move mobile parabolic antennas. This function is available in satellite mode and when the equipment is powering the LNB.

Halt: This command stops the motor movement.

East: Allows to move the motor in the EAST direction. Each click corresponds to one step in the movement of the motor (pitch motors). By holding the key down, successive movement sequences will be executed until the key is released.

West: Motor movement in the WEST direction. Each click corresponds to one step in the movement of the motor (pitch motors). By holding the key down, successive movement sequences will be executed until the key is released.

Store: 8 storage positions are available to store at up to 8 antenna positions. This command allows one of 8 positions to be chosen where the current position of the antenna will be stored.

Goto: recovers one of the 8 positions for the antenna that has been previously stored

SCR (only satellite band): Selects the SCR parameters (multiswitch, standard and slots) When a slot is enabled (for example slot 3, freq. 1210MHz), the meter will tune into the slot frequency (1210MHz) and will set the slot with the meter parameters: frequency, band (powering), and DiSEqC. In addition, a SCR icon will be shown in the bar at the top (SCR3) to indicate that the slot is enabled. While the slot is enabled, all the setting changes of the meter, will be applied to the currently slot (SCR3).

6.4.2.- Services

This feature shows a graph with the distribution of the services as the channel. Tapping on one of the sections of the graph, you can see the name of the corresponding service. If you see this feature in full screen, you will have more detailed information.

6.4.2.1.- Main window

The screenshot shows the 'Analyzer - Services' interface. On the left is a pie chart showing the distribution of services by PID type: Video (30%), Audio (19%), and Others (51%). On the right are two tables. The top table lists services with their IDs, names, and bitrates. The bottom table lists streams with their IDs, names, and bitrates. Callouts point to the pie chart, the service list, and the stream list.

Graph with the distribution of the channels services

List of services with ID, the LCN (for DVB channels) or the Virtual Channel (for ISDB-T channels), the service name, and bitrates. The color of the squares corresponds to the color of the section in the graph

ID	Service	Rate (Mbps)
533	Clan	1.079463
534	La 3 HD	4.544436
535	RNE Galicia	0.345027
536	Radio 5 RNE	0.345027
538	La 2 HD	3.555040
	Null Packets	0.563302
Total TS (9 Services)		20.053333

ID	Stream	Bitrate (Mbps)
215	Data	0.002949
401	Video H264	3.027168
402	Audio EAC3 spa	0.395058
403	Audio EAC3 spa	0.395058
404	Audio EAC3 spa	0.076674
211	Null Packets	0.004177
Total La 2 HD		3.555040

Distribution and bitrates of the service PIDs

Service PIDs. The colors of the squares indicate the PID type

6.4.2.2.- Options context menu

The screenshot shows the 'Options' context menu overlaid on the service list. The menu has two sections: 'Quality Profile' and 'Powering'. The 'Quality Profile' section has a radio button selected for '21%' and another for '15%'. The 'Powering' section has a radio button selected for 'DiSEqC' and another for 'VDC'. The background shows the service list with 'La 1 HD' selected.

Quality Profile

- 21%
- 15%

Powering

- DiSEqC
- VDC

- Quality profile: allows to select the quality profile
- Powering:
 - VDC: Selects the preamplifier powering.
 - DiSEqC (only satellite band): selects the DiSEqC parameter (Sat A, Sat B, Sat C, Sat

- D).
- Positioner (only satellite band): makes it possible to control the DiSeqC motors used to move mobile parabolic antennas. This function is available in satellite mode and when the equipment is powering the LNB.

Halt: This command stops the motor movement.

East: Allows to move the motor in the EAST direction. Each click corresponds to one step in the movement of the motor (pitch motors). By holding the key down, successive movement sequences will be executed until the key is released.

West: Motor movement in the WEST direction. Each click corresponds to one step in the movement of the motor (pitch motors). By holding the key down, successive movement sequences will be executed until the key is released.

Store: 8 storage positions are available to store at up to 8 antenna positions. This command allows one of 8 positions to be chosen where the current position of the antenna will be stored.

Goto: recovers one of the 8 positions for the antenna that has been previously stored.

- SCR (only satellite band): Selects the SCR parameters (multiswitch, standard and slots) When a slot is enabled (for example slot 3, freq. 1210MHz), the meter will tune into the slot frequency (1210MHz) and will set the slot with the meter parameters: frequency, band (powering), and DiSeqC. In addition, a SCR icon will be shown in the bar at the top (SCR3) to indicate that the slot is enabled. While the slot is enabled, all the setting changes of the meter, will be applied to the currently slot (SCR3).

6.4.3.- Measurements (RF input)


This feature shows the measurements of the selected channel. The measurements depends on the signal modulation:

- DVB-S: Power, C/N, MER, CBER, VBER
- DVB-S2: Power, C/N, MER, LDPCBER, BCHBER
- DVB-T: Power, C/N, MER, CBER, VBER
- DVB-T2: Power, C/N, Link Margin, LDPCBER, BCHBER

DVB-C: Power, C/N, CBER, MER
 Analog: Level, C/N, V/A, HUM, CTB, CSO

If you see this feature in full screen, you will have more detailed information.

6.4.3.1.- Main window

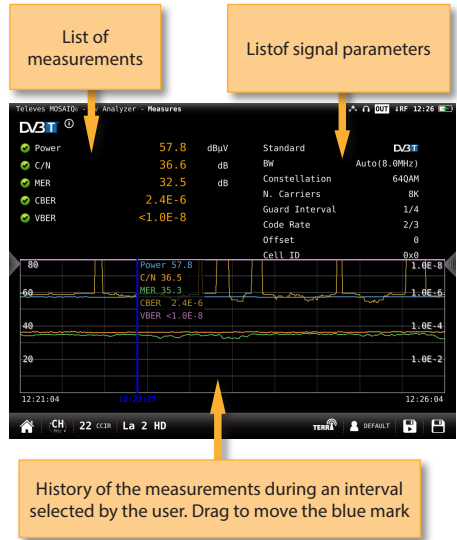

6.4.3.2.- Options context menu



- Clear: restarts the graph.
- Last: 5 min, ½ hour, ½ day, 1 day, 1 week. Allows

select the time interval shown in the graph

- Quality profile: allows to select the quality profile

- Powering:

- VDC: Selects the preamplifier powering.
- DiSEqC (only satellite band): selects the DiSEqC parameter (Sat A, Sat B, Sat C, Sat D).
- Positioner (only satellite band): makes it possible to control the DiSEqC motors used to move mobile parabolic antennas. This function is available in satellite mode and when the equipment is powering the LNB.

Halt: This command stops the motor movement.

East: Allows to move the motor in the EAST direction. Each click corresponds to one step in the movement of the motor (pitch motors). By holding the key down, successive movement sequences will be executed until the key is released.

West: Motor movement in the WEST direction. Each click corresponds to one step in the movement of the motor (pitch motors). By holding the key down, successive movement sequences will be executed until the key is released.

Store: 8 storage positions are available to store at up to 8 antenna positions . This command allows one of 8 positions to be chosen where the current position of the antenna will be stored.

Goto: recovers one of the 8 positions for the antenna that has been previously stored

- SCR (only satellite band): Selects the SCR parameters (multiswitch, standard and slots) When a slot is enabled (for example slot 3, freq. 1210MHz), the meter will tune into the slot frequency (1210MHz) and will set the slot with the meter parameters: frequency, band (powering), and DiSEqC. In addition, a SCR icon will be shown in the bar at the top (SCR3) to indicate that the slot is enabled. While the slot is enabled, all the setting changes of the meter, will be applied to the currently slot (SCR3).
- CTB (only analog channels): Turns ON/OFF the CTB measurement. If you select CTB ON, a popup window will be displayed asking

you to turn the signal off. CTB can only be made with the service disabled, because it is a measurement made in the frequency of the video carrier of the TV signal. Turn the signal ON again to measure CTB and all other measurements properly.

- CSO Offsets (only analog channels): The CSO measure is carried out in different frequencies (at different distances from the video carrier) within the selected channel. Using this menu you can select the offset where you want to measure the CSO, and you can save up to 6 offset values, that can be the default values or user-selected ones.

6.4.4.- Spectrum (RF Input)

This feature shows the spectrum of the signal.

6.4.4.1.-Main window

The screenshot shows the 'Spectrum' window of the Televes M05A10 TV Analyzer. The main display is a spectrum plot with a yellow signal trace. The y-axis represents power in dBμV, ranging from -10 to 50. The x-axis represents frequency in MHz, ranging from 472.000 to 492.000. A callout box at the top left explains: 'Swipe to tune next/previous channel', 'Drag to tune any channel', and 'Spread/Pinch to change span'. A callout box at the top right points to the 'Spectrum parameters' area, which displays: 'SP. W: 20MHz', 'BW: 8MHz', 'VM: 11000Hz', and 'VM: 30Hz'. A callout box at the bottom left points to the 'Power' measurement area, which shows '57.8 dBμV'. A callout box at the bottom right points to the 'MARKS' button in the bottom right corner, with the text 'Tap to enable/disable marks'. The bottom status bar shows 'CH 2 CCIR', 'TELEVES', and 'DEFAULT'.

If you tap to enable marks:

Drag to move the active mark

Tap to activate a mark
+ adds a new mark (max. 6).
- removes the active mark

Delta: measures the level difference between two marks

hold features. Tapping on Clear button to restart hold trace.

- Trigger: enables/disables the trigger by level feature. To select the level, tap on the label and a popup keyboard appears.
- Fill: enables/disables the spectrum graph filled.
- Quality profile: allows to select the quality profile
- Powering:
 - VDC: Selects the preamplifier powering.
 - DiSeqC (only satellite band): selects the DiSeqC parameter (Sat A, Sat B, Sat C, Sat D).
 - Positioner (only satellite band): makes it possible to control the DiSeqC motors used to move mobile parabolic antennas. This function is available in satellite mode and when the equipment is powering the LNB.
 - Halt: This command stops the motor movement.
 - East: Allows to move the motor in the EAST direction. Each click corresponds to one step in the movement of the motor (pitch motors). By holding the key down, successive movement sequences will be executed until the key is released.
 - West: Motor movement in the WEST direction. Each click corresponds to one step in the movement of the motor (pitch motors). By holding the key down, successive movement sequences will be executed until the key is released.

6.4.4.2.- Options context menu

- Span: 100KHz, 1MHz, 5MHz, 10 MHz, 20 MHz, 50 MHz, 100 MHz, 200 MHz, 500 MHz, 1.0GHz, 2.0GHz, 3.3GHz, Other.
- Reference level: Auto, 50dBuV – 130dBuV
- RBW: 500 HzW – 5MHzW
- VBW: 100Hz – 1MHz
- Advanced: Access to spectrum advanced features:
 - Hold: enables/disables max. hold & min.


hold features. Tapping on Clear button to restart hold trace.

- Trigger: enables/disables the trigger by level feature. To select the level, tap on the label and a popup keyboard appears.
- Fill: enables/disables the spectrum graph filled.
- Quality profile: allows to select the quality profile
- Powering:
 - VDC: Selects the preamplifier powering.
 - DiSeqC (only satellite band): selects the DiSeqC parameter (Sat A, Sat B, Sat C, Sat D).
 - Positioner (only satellite band): makes it possible to control the DiSeqC motors used to move mobile parabolic antennas. This function is available in satellite mode and when the equipment is powering the LNB.
 - Halt: This command stops the motor movement.
 - East: Allows to move the motor in the EAST direction. Each click corresponds to one step in the movement of the motor (pitch motors). By holding the key down, successive movement sequences will be executed until the key is released.
 - West: Motor movement in the WEST direction. Each click corresponds to one step in the movement of the motor (pitch motors). By holding the key down, successive movement sequences will be executed until the key is released.
- Store: 8 storage positions are available to store at up to 8 antenna positions . This command allows one of 8 positions to be chosen where the current position of the antenna will be stored.
- Goto: recovers one of the 8 positions for the antenna that has been previously stored
- SCR (only satellite band): Selects the SCR parameters (multiswitch, standard and slots) When a slot is enabled (for example slot 3, freq. 1210MHz), the meter will tune into the slot frequency (1210MHz) and will set the slot with the meter parameters: frequency, band (powering), and DiSeqC. In addition, a SCR icon will be shown in the bar at the top (SCR3) to indicate that the slot is enabled. While the slot is enabled, all the setting changes of the meter, will be applied to the currently slot (SCR3).

6.4.5.- Constellation (RF Input)

This feature shows the constellation diagram of the tuned channel.

6.4.5.1.- Main window

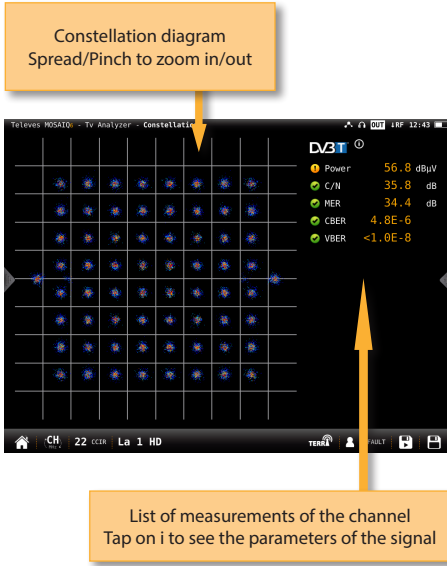

DVB-T), Other. Allows you to select the constellation of the selected carrier(s).

- Quality profile: allows to select the quality profile
- Powering:

- VDC: Selects the preamplifier powering.
- DiSEqC (only satellite band): selects the DiSEqC parameter (Sat A, Sat B, Sat C, Sat D).
- Positioner (only satellite band): makes it possible to control the DiSEqC motors used to move mobile parabolic antennas. This function is available in satellite mode and when the equipment is powering the LNB.

• Halt: This command stops the motor movement.

• East: Allows to move the motor in the EAST direction. Each click corresponds to one step in the movement of the motor (pitch motors). By holding the key down, successive movement sequences will be executed until the key is released.


• West: Motor movement in the WEST direction. Each click corresponds to one step in the movement of the motor (pitch motors). By holding the key down, successive movement sequences will be executed until the key is released.

• Store: 8 storage positions are available to store at up to 8 antenna positions . This command allows one of 8 positions to be chosen where the current position of the antenna will be stored.

• Goto: recovers one of the 8 positions for the antenna that has been previously stored

-SCR (only satellite band): Selects the SCR parameters (multiswitch, standard and slots) When a slot is enabled (for example slot 3, freq. 1210MHz), the meter will tune into the slot frequency (1210MHz) and will set the slot with the meter parameters: frequency, band (powering), and DiSEqC. In addition, a SCR icon will be shown in the bar at the top (SCR3) to indicate that the slot is enabled. While the slot is enabled, all the setting changes of the meter, will be applied to the currently slot (SCR3).

6.4.1.2.- Options context menu

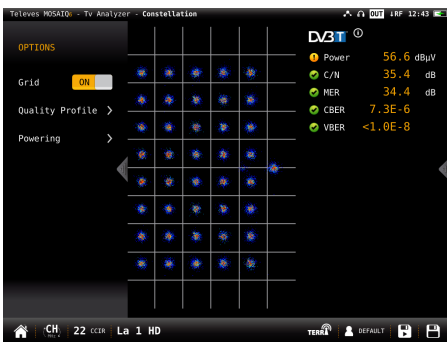

- Grid: ON/OFF. Shows/hide the grid.
- Carrier (only DVB-T/T2): All, TPS+continual (only

6.4.6.- Echoes (RF Input)

This feature you allows to visualize the echoes of the received signal, helping the installer to minimize them as much as possible for optimal signal reception.

6.4.6.1.- Main window

The blue mark indicates the delay and the level of the signal
Drag to move

Orange mark indicates the minimum level of the echoes
Drag to move

List of measurements of the channel
Tap on i to see the parameters of the signal

List of echoes with the delay and level of each one

Num echoes: 1		
#	Delay(μs)	Level(dB)
0	5	-31.7

6.4.6.2.- Options context menu:

Options context menu:

- Min Level: -36.9 dB
- Quality Profile >
- Powering >

Num echoes: 1		
#	Delay(μs)	Level(dB)
0	6	-31.3

•Min. Level: allows to indicate the level from which the meter must take account of the echoes. You can also change this level by dragging the horizontal orange level.

•Zoom: OFF, 2x, 4x, 8x, 16x. You can also Spread/pinch on the screen.

•Units: us, Km.

•Quality profile: allows to select the quality profile

•Powering:

- VDC: Selects the preamplifier powering.
- DiSEqC (only satellite band): selects the DiSEqC parameter (Sat A, Sat B, Sat C, Sat D).
- Positioner (only satellite band): makes it possible to control the DiSEqC motors used to move mobile parabolic antennas. This function is available in satellite mode and when the equipment is powering the LNB.
 - Halt: This command stops the motor movement.

East: Allows to move the motor in the EAST direction. Each click corresponds to one step in the movement of the motor (pitch motors). By holding the key down, successive movement sequences will be executed until the key is released.

West: Motor movement in the WEST direction. Each click corresponds to one step in the movement of the motor (pitch motors). By holding the key down, successive movement sequences will be executed until the key is released.

Store: 8 storage positions are available to store at up to 8 antenna positions . This command allows one of 8 positions to be chosen where the current position of the antenna will be stored.

Goto: recovers one of the 8 positions for the antenna that has been previously stored

- SCR (only satellite band): Selects the SCR parameters (multiswitch, standard and slots) When a slot is enabled (for example slot 3, freq. 1210MHz), the meter will tune into the slot frequency (1210MHz) and will set the slot with the meter parameters: frequency, band (powering), and DiSEqC. In addition, a SCR icon will be shown in the bar at the top (SCR3) to indicate that the slot is enabled. While the slot is enabled, all the setting changes of the meter, will be applied to the currently slot (SCR3).

6.4.7.- MER/carrier (RF Input)

This feature represents MER value for each carrier of the DVB-T signal. This is pretty useful to detect if there is any interference inside the channel that makes the quality signal to get worse and that is invisible for a traditional spectral analysis.

6.4.7.1.- Main window

The orange mark indicates the average MER of the carriers

The blue mark indicates the MER of the carrier where the mark is placed

List of measurements of the selected channel
Tap on i to see the parameters

Average, maximum and minimum MER values

PowerF	57.2	dBuV	MER rms	34.2	dB
C/N	35.9	dB	MER max	40.0	dB
MER	34.2	dB	MER min	26.3	dB
CBER	2.4E-6				
VBER	<1.0E-8				

6.4.7.2.- Options context menu

Options context menu showing Quality Profile and Powering options.

MER rms	34.1	dB
MER max	39.8	dB
MER min	27.0	dB

EN


- Carrier: allows you to select the carrier where you want to measure the MER, placing the blue marker on the graph.
- Quality profile: allows to select the quality profile
- Powering:
 - VDC: Selects the preamplifier powering.

6.4.8.- Uncorrected packets (RF Input)

This feature makes an uncorrected packet analysis during a timer interval selected by the user.

- MER RMS: Average MER of the DVB-T signal.
- MER max: Maximum MER value of the DVB-T signal. In parentheses the number of carrier with this maximum valuer of MER. If you tap on this measurement, the blue mark will move to the carrier with the maximum MER, and will be moving searching the carrier with maximum MER each time.
- MER min: Minimum MER value of the DVB-T signal. In parentheses the number of carrier with this minimum valuer of MER. If you tap on this measurement, the blue mark will move to the carrier with the minimum MER, and will be moving searching the carrier with minimum MER each time.

6.4.8.1.- Main window

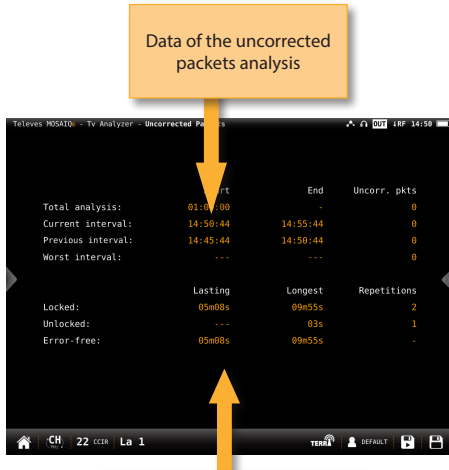

Total analysis: Start and end time of the analysis, and number of uncorrected packets in all the intervals analysed.

Current interval: Start and end time of the current interval, and number of uncorrected packets.

Previous interval: Start and end time of the previous interval and number of uncorrected packets.

Worst interval: Start and end time of the interval with more uncorrected packets, and number of uncorrected packets in the worst interval of analysis since it was started.

Locked: Time gone by since the demodulator locked to the digital signal the last time, longest time the digital signal was locked, and number of locking.

Unlocked: Time gone by since the demodulator unlocked to the digital signal the last time, longest time the digital signal was unlocked, and number of unlocking.

Error-free: Time gone by since last uncorrected packet, and longest time gone by since last uncorrected packet.

6.4.8.2.- Options context menu:



- Restart: restart the uncorrected packets analysis
- Interval: Change the analysis interval time. The interval is configurable between 1 minute and 1 hour.

•Powering:


- VDC: Selects the preamplifier powering.
- DiSEqC (only satellite band): selects the DiSEqC parameter (Sat A, Sat B, Sat C, Sat D).
- Positioner (only satellite band): makes it possible to control the DiSEqC motors used to move mobile parabolic antennas. This function is available in satellite mode and when the equipment is powering the LNB.
 - Halt: This command stops the motor movement.
 - East: Allows to move the motor in the EAST direction. Each click corresponds to one step in the movement of the motor (pitch motors). By holding the key down, successive movement sequences will be executed until the key is released.
 - West: Motor movement in the WEST direction. Each click corresponds to one step in the movement of the motor (pitch motors). By holding the key down, successive movement sequences will be executed until the key is released.
- Store: 8 storage positions are available to store at up to 8 antenna positions. This command allows one of 8 positions to be chosen where the current position of the antenna will be stored.
- Goto: recovers one of the 8 positions for the antenna that has been previously stored
- SCR (only satellite band): Selects the SCR

parameters (multiswitch, standard and slots) When a slot is enabled (for example slot 3, freq. 1210MHz), the meter will tune into the slot frequency (1210MHz) and will set the slot with the meter parameters: frequency, band (powering), and DiSEqC. In addition, a SCR icon will be shown in the bar at the top (SCR3) to indicate that the slot is enabled. While the slot is enabled, all the setting changes of the meter, will be applied to the currently slot (SCR3).


6.4.9.-IP Analysis (Ethernet Input)

This function makes a deep analysis of the IP signal, and shows the parameters of the signal and all the corresponding measures, as well as a chart that represents a history of the measurements in a period of time selected by the user.

6.4.13.1.- Main window

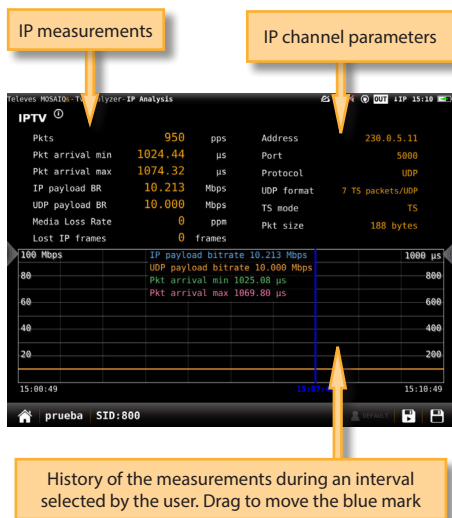

6.4.14.2.- Options context menu

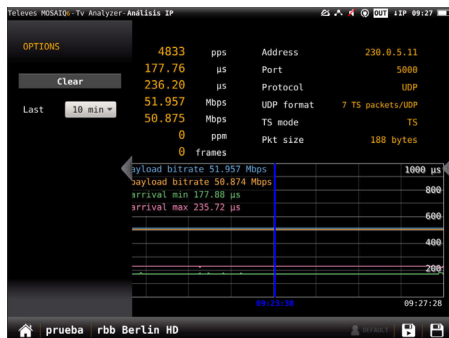

- Clear: clears the graph.
- Last: 10 min, ½ hour, 1hour, ½ day, 1 day, 1 week. Allows select the time interval shown in the graph.



7. Spectrum analyser

These feature has two screens: spectrum analyser and waterfall. Long swipe to switch between them.

7.1.- Spectrum analyser

This feature shows the spectrum of the input signal.

7.1.1.- Main window

Swipe to tune next/previous channel
Drag to tune any channel
Spread/Pinch to change span

Spectrum parameters

Power or C/N measurement. Tap to change

Tap to enable/disable the marks

Power 57.8 dBuV

MARKS

If you tap to enable the marks:

Drag to move the active mark

Tap to activate a mark
+ adds a new mark (max. 6).
- removes the active mark

Delta: measures the level difference between two marks

50A

SPAN: 20MHz
BW: 9MHz
RBW: 100kHz
VBW: 3kHz

30

10

-10

472.000MHz 482.000MHz 492.000MHz

Del:to: -7.0 MHz
-27.2 dB

MARKS

C/N 36.9 dB

482.287 MHz 34.2 dBuV 8.3 dBuV 26.8 dBuV

488.920 MHz

CH 22 CCR

TERA

DEFAULT

7.1.2.- Options context menu

OPTIONS

- Span >
- Ref Level >
- dB/div >
- RBW <
- VBW >
- Advanced >
- Quality Profile >
- Powering >

Als antenna OFF

CH 22 CCR

TERA

DEFAULT

SPAN: 20MHz
BW: 9MHz
RBW: 100kHz
VBW: 3kHz

482.000MHz

MARKS

- Span: 100KHz, 1MHz, 5MHz, 10 MHz, 20 MHz, 50 MHz, 100 MHz, 200 MHz, 500 MHz, 1.0GHz, 2.0GHz, 3.3GHz, Other.

- Reference level: Auto, 50dBuV – 130dBuV


- RBW: 500 HzW – 5MHzW
- VBW: 100Hz – 1MHz
- Advanced: Access to spectrum advanced features:
 - Hold: enables/disables max. hold & min. hold features. Tapping on Clear button to restart hold trace.
 - Trigger: enables/disables the trigger by level feature. To select the level, tap on the label and a popup keyboard appears.
 - Fill: enables/disables the spectrum graph filled.
- Quality profile: allows to select the quality profile
- Powering:
 - VDC: Selects the preamplifier powering.
 - DiSEqC (only satellite band): selects the DiSEqC parameter (Sat A, Sat B, Sat C, Sat D).
 - Positioner (only satellite band): makes it possible to control the DiSEqC motors used to move mobile parabolic antennas. This function is available in satellite mode and when the equipment is powering the LNB.
 - Halt: This command stops the motor movement.
 - East: Allows to move the motor in the EAST direction. Each click corresponds to one step in the movement of the motor (pitch motors). By holding the key down, successive movement sequences will be executed until the key is released.
 - West: Motor movement in the WEST direction. Each click corresponds to one step in the movement of the motor (pitch motors). By holding the key down, successive movement sequences will be executed until the key is released.
 - Store: 8 storage positions are available to store at up to 8 antenna positions . This command allows one of 8 positions to be chosen where the current position of the antenna will be stored.
 - Goto: recovers one of the 8 positions for the antenna that has been previously stored
 - SCR (only satellite band): Selects the SCR parameters (multiswitch, standard and slots) When a slot is enabled (for example slot 3, freq. 1210MHz), the meter will tune

into the slot frequency (1210MHz) and will set the slot with the meter parameters: frequency, band (powering), and DiSEqC. In addition, a SCR icon will be shown in the bar at the top (SCR3) to indicate that the slot is enabled. While the slot is enabled, all the setting changes of the meter, will be applied to the currently slot (SCR3).

7.2.- Waterfall


The waterfall diagram is a three-dimensional representation of the signal spectrum. Signal levels are converted to colours and displayed along a time axis.

7.2.1.- Main window

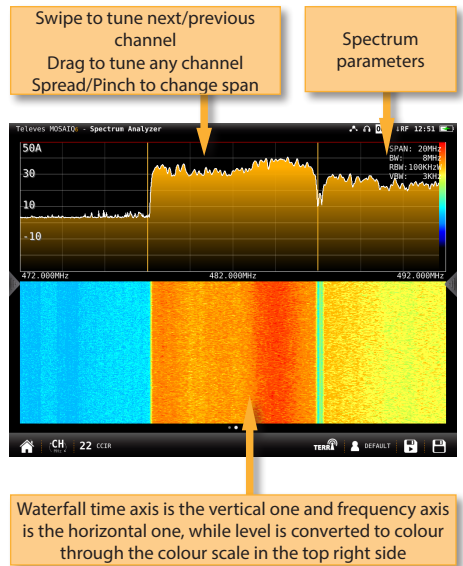

Every spectrum trace in the top half generates a new waterfall line in the bottom half.

7.2.2.- Options context menu:

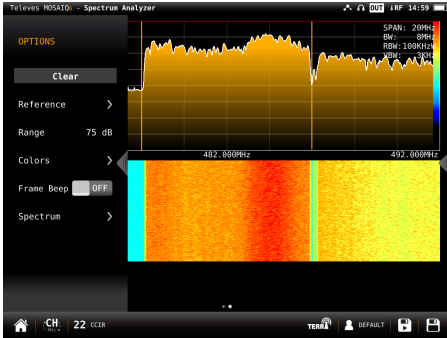

- Clear: It clears the waterfall display.
- Reference: it changes the level of the highest colour in the colour scale. Signal levels above this reference will be displayed in this colour.
- Range: it changes difference in dB between the highest and the lowest colour of the colour scale on the waterfall display.
- Colours: it changes the colour palette. Different colour combinations can be selected for the waterfall representation (Jet, Hot and BlueHot).
- Frame beep: when this option is ON, a beep sounds each time the waterfall screen fully refreshes, so there is no need to look at the screen continuously. Looking at the screen just when the beep sounds guarantees not missing any waterfall information.
- Spectrum: accesses to the spectrum options context menu (see section 7.1.- *Spectrum analyser*).



8. Radio Analyser


This feature is similar to TV Analysis in the radio band. So it has two screens: scan and mosaic 3+1. Long swipe to switch between them.

8.1.- Scan Radio


This features scans the FM and DAB band.

The scan measurement leverages the location based thresholds to clearly show whether or not signal levels comply with the cable system's specifications with their green, yellow and red bar.

8.3.1.- Main window

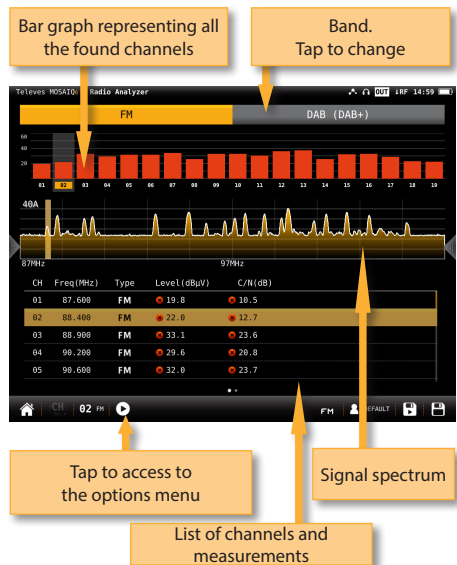

Tapping on icon  a popup window will appear:

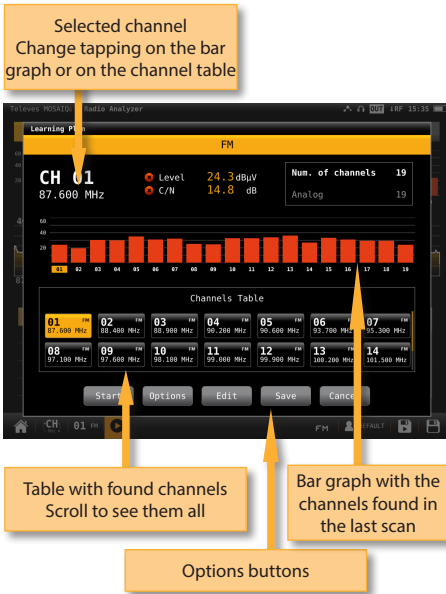

•Cancel: Closes the options window

8.3.2.- Options context menu



EN

•Start: Starts a new system scan

•Options:

- Fast: ON/OFF. When the fast scan is enabled (ON), the meter will not make CBER and MER measurements for DAB channels. So, only power and C/N measurements will be shown.
- Wide outlet: ON/OFF. Enable this option when the outlet in your installation has both terrestrial and satellite bands. So, both bands will be scanned consecutively. If this options is disabled, only the selected band will be scanned.

Note: Note that if the selected user profile does not allow to make measurements in some bands, the scan will not be done in that band.

•Edit: Allows to add/delete channels from the plan. If the channel is selected (orange coloured), when you tap on it, it will be deselected. Otherwise, if the channel is unselected (grey coloured), when you tap on it, it will be selected.

•Save: Saves a new plan with the found channels.

•Fast: ON/OFF. When the fast scan is enabled (ON), the meter will not make CBER and MER measurements for DAB channels. So, only power and C/N measurements will be shown.

•Wide outlet: ON/OFF. Enable this option when the outlet in your installation has both terrestrial and satellite bands. So, both bands will be scanned consecutively. If this options is disabled, only the selected band will be scanned.

Note: Note that if the selected user profile does not allow to make measurements in some bands, the scan will not be done in that band.

•Show all: ON/OFF. When show all is ON, all the measurements of all the channels are shown. When it is OFF, you can only see the measurements of the channel that is being measured in that moment.

•Span full: ON/OFF. When Span full ins ON you can see all the bars corresponding to all the found channels. When this option is OFF, only 24 bars are shown, so it is necessary to scroll to see them all.

•Tilt: ON/OFF. When the tilt option is ON, this function measures the tilt between the channels indicated in the labels CH A and CH B. Then you can see a white line between these two channels and the tilt measurement on it.

•Attenuation: ON/OFF. When the attenuation option is ON, the MOSAIQ6 measures the

attenuation of the installation relative to a reference point, usually the head-end output. So, the first thing you must do is connect the meter to the reference point and tap on the Calibrate button. In this way, the equipment will measure and save the level of all the channels.

Then you must go to all the pints of the installation where we want to measure and connect the meter, taking care to have this function ON. The MOSAIQ6 will measure the levels of all the channels comparing them with the reference ones.


When this option is ON, the bars of the graphic don't represent the level or the power of the channels, but the attenuation of each one of them. The list shows power (or level) and C/N. In addition, a green trace is shown in the spectrum. This trace indicates the levels in the reference point.

- Quality profile: allows to select the quality profile .
- Powering:
 - VDC: Selects the preamplifier powering.

8.2.- Mosaiq 3+1

This screen has 4 widgets, 3 in the top of the screen and one in the lower part of the screen. These widgets are user-configurable, that is, the user can select the function he or she wants to visualize in each widget.

8.2.1.- Main Window

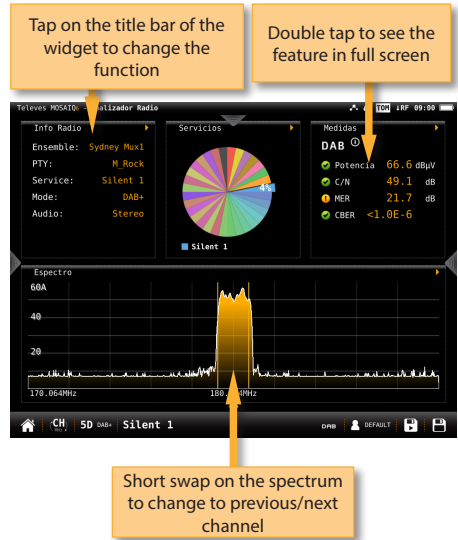

The available features are explained in section 8.3.- Radio features.

8.2.2.- Options context menu



- Quality profile: allows to select the quality profile .
- Powering:
 - VDC: Selects the preamplifier powering.

8.3.- Radio features

This section explains all the features available to visualize in the widgets of the Mosaik 3+1 mode.

8.3.1.- Info radio

This feature shows the information of the tuned channel.


If it is a FM channel, the information shown is: RDS, PS name, PTY, PI, TP & radio text.

If it is a DAB channel, the information shown is: Ensemble, PTY, Service, Mode, Audio.

8.3.1.1.- Main Window



8.3.1.2.- Options context menu

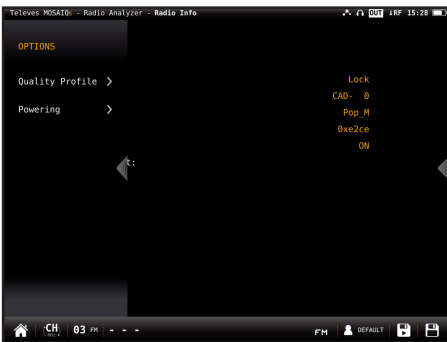

- Quality profile: allows to select the quality profile .
- Powering:
 - VDC: Selects the preamplifier powering.

8.3.2.- Services (only for DAB channels)

This feature shows a graph representing the services distribution. Tapping on a section, you can see the name of the corresponding service.

8.3.2.1.- Main Window


Graph with the distribution of the channel services

List of services with IDs and bitrates. The colour of each square corresponds to the colour of the graph section

Distribution of the service's PIDs and bitrates

Service's PIDs. The colors indicate the type of PID

8.3.2.2.- Options context menu

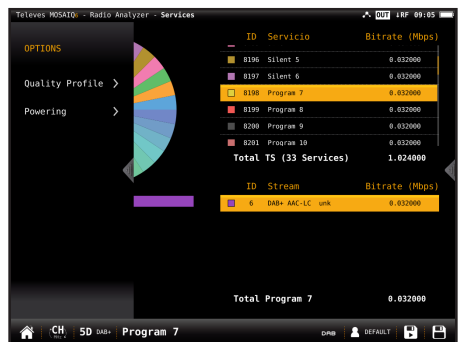

- Quality profile: allows to select the quality profile .
- Powering:
 - VDC: Selects the preamplifier powering.

8.3.3.- Measurements

This feature shows the measurements of the selected channel. The measurements depends on the type of channel:

FM: Level, C/N

DAB: Power, C/N, BER and MER

8.3.3.1.- Main window

select the time interval shown in the graph

- Quality profile: allows to select the quality profile
- Powering:
 - VDC: Selects the preamplifier powering.



9. Wi-Fi Analyser

The **MOSAIQ6** is able to perform a full analysis of the Wi-Fi band in both 2,4GHz, and 5GHz bands. To change the band selection, tap on the corresponding icon placed in the bottom bar.

When you access to this feature, the **MOSAIQ6** activates the Wi-Fi automatically and, if it has been connected to an available Wi-Fi network before, the **MOSAIQ6** has saved the password, so it will connect to the same network again automatically.

The default selected Wi-Fi network is the first in the Wi-Fi list, in addition, this Wi-Fi is highlighted in the channel map of the widget in the bottom of the screen. The selected Wi-Fi does not have to match the Wi-Fi the MOSAIQ6 is connected to.

The screen corresponding to this feature is Mosaic3+1 type. This configuration has 4 widgets, 3 square ones in the top and a rectangular in the bottom. The top widgets are user-configurable.

8.3.3.2.- Options context menu

- Clear: restarts the graph.
- Last: 5 min, ½ hour, ½ day, 1 day, 1 week. Allows

10.1.- Main window

9.2.- Features

This section explains all the features available to visualize in Wi-Fi analyser function.

9.2.1- Wi-Fi List

This feature shows a list with all the Wi-Fi networks detected by the **MOSAIQ6**.

In this list, the user can select the Wi-Fi network whose measurements he wants to view by tapping on it.

Note: to minimize this widget, the user must tap twice on the line corresponding to the selected Wi-Fi, otherwise another Wi-Fi will be selected.

The list can be ordered by SSID, BSSID, channel name, frequency, encryption type or signal level, the user just has to tap on the header of the corresponding column.

9.2.2.1.- Main window

Tap on the column header to order the list according to that parameter

Tap on the Wi-Fi to select it

SSID	BSSID	CH	Freq	Encryption	Level (dBm)
Gsertel-Guest	12:da:43:c3:4a:db	6	2437	WPA2	-61
triton-mesh-1	e2:a8:76:8a:bd:0d	6	2437	WPA2	-52
gsertel-radius	10:da:43:c3:4a:dd	6	2437	WPA2	-59
GL-AR150-17a	e8:95:6e:4f:01:7a	6	2437	WPA2	-60
Ladatel_2_4	ac:22:0b:d2:cd:a8	5	2432	WPA, WPA2	-60
GL-AR150-5b8	e8:95:6e:41:e5:b8	6	2437	WPA, WPA2	-61
NightHawk	a8:03:91:30:de:a7	1	2412	WPA2	-62
H3RREVOLUTION_051917992	3c:a3:08:b9:4c:e7	5	2432	WPA2	-67
triton_2_4g	3c:37:86:71:49:6e	6	2437	WPA2	-67
RUT240_0B7C	02:1e:42:22:0b:7c	1	2412	WPA2	-61
RUT950_69AB	02:1e:42:22:69:ab	6	2437	WPA2	-72
V40_ThInD_5B	3a:30:f9:eb:79:22	4	2427	WPA2	-68
dd-wrt	c8:56:27:1d:9d:09	6	2437		-69
Ladatel-Guest	c8:56:27:24:c2:3a	11	2462		-70
Trafalco-Guest	7a:10:13:da:01:36	11	2463	WPA3	-73

9.2.1.1.- Main window

Status and level measurement

Wi-Fi network parameters

Level measurement historial during a time interval selected by the user. Drag to move the blue marker

9.2.1.2.- Contextual options menu

- Clear: resets the chart.
- Last: 10 min, ½ hour, ½ day, 1 day, 1 week. Allows you to select the time interval shown in the chart.

9.2.1- Wi-Fi measurements

This feature shows all the measurements of the Wi-Fi network selected by the user.

The default selected Wi-Fi network is the first in the Wi-Fi list. To select another Wi-Fi, you must maximize the Wi-Fi List widget (see section 10.2.1.- Wi-Fi List), or the Channel Map widget (see section 10.2.4.- Channel Map)

9.2.3- Time graph

This feature shows a graph with the level measurement historical of all the Wi-Fi networks detected by the **MOSAIQ6**.

9.2.3.1.- Main window

You can select the Wi-Fi networks that you want to see in the graph

Select/unselect all the networks

History of the level measurement during an interval selected by the user

The screenshot shows the 'Analyzer-Time Graph' interface. At the top, there are buttons for 'Deselect All' and 'Select All'. Below these is a list of 10 Wi-Fi networks, each with a colored button: GL-AR539-77a, LANTEL_2_4, Itebus-guest, Triton-radius-02, VOLITION-121092920, triton-mesh-3, VOLITION-05191799208, GL-AR150-558, V40-75100-58, triton_2_4g, gl-wifi, Lanotel-guest, NightHawk, gisrael-radius, and RUT746-B07C. Below the list is a graph showing signal strength levels for these networks over time, with a y-axis from -20 to -80 dBm and an x-axis from 10:50:27 to 11:00:27.

When this feature is maximized, the user can select a Wi-Fi using the “up” and “down” arrow buttons of the device. The selected Wi-Fi will be shown in the foreground.

10.2.4.1.- Main window

Graph with the distribution of all the Wi-Fi networks and the levels of the carriers

Parameters and level of the carrier of the selected Wi-Fi

The screenshot shows the 'Channel Map' interface. It displays a graph of signal strength distribution across 14 channels. Several networks are highlighted with colored bell curves: NightHawk (green), triton-mesh-1 (blue), and Lanotel-5003c (grey). Below the graph, detailed parameters for the selected network 'triton-mesh-1' are shown: CH 6, 2437 MHz, [WPA2-PSK-CCKM] [IBSS], and a signal level of -59 dBm.

9.2.3.2.- Contextual options menu

The screenshot shows the 'Contextual options menu' overlaid on the main window. It includes a 'Clear' button, a 'Last' dropdown menu currently set to '10 min', and a list of network names: triton_2_4, NightHawk, Lanotel-guest, mtia-test, Arantia-guest, Room_110_A_b, gisrael-radius, less-radius, and Arantia_wifi.

- Clear: resets the graph.
- Last: 10 min, ½ hour, ½ day, 1 day, 1 week. Allows select the time interval shown in the graph.

9.2.4- Channel map

This feature shows a graph with the distribution of all the Wi-Fi networks detected by the MOSAIQ6.



10. Network Tools

In this menu are grouped all the features that allow to check the network.

The screen corresponding to this feature is Mosaic4 type. This configuration has 4 widgets. All the widgets are user-configurable.

10.1.- Main window

Tap on the top bar to select the widget feature

Double-tap to see the feature screen in full screen

10.2.- Features

This section explains all the features available to visualize in Network Tools function.

10.2.1- Ping

This function attempts to connect to the server selected by the user. If the connection is established, the **MOSAIQ6** makes a successive pings to the server and shows the delay times.

10.2.1.1.- Main window

Hexylon's network parameters

Orange icon if the ping is stopped
Green icon if the ping is running
Red icon if the connection to the server can not be established

IP address of the server.
Tap to change.
And packets loss measure


List of the successive pings

Tap to Start/Stop the ping


10.2.2- ARP Scan

The ARP (Address Resolution Protocol) Scan feature scans the devices in the network and returns the IP, the MAC and the manufacturer of each one.

10.2.2.1.- Main window

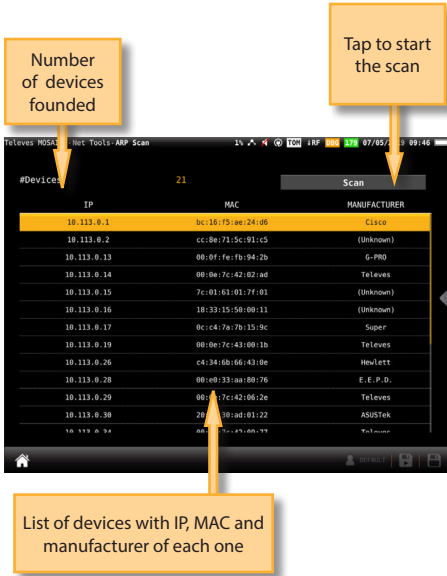

10.2.2.1.- Main window

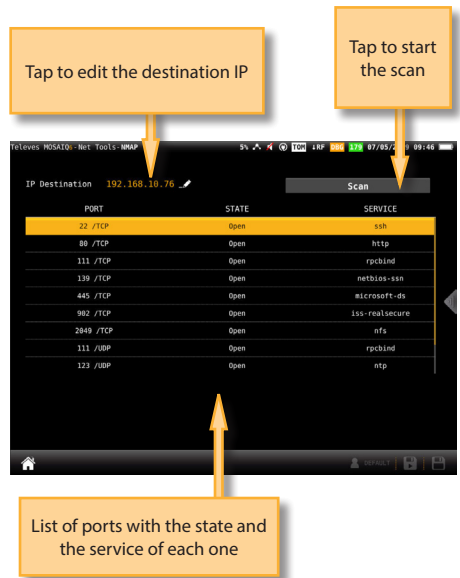

10.2.3- NMAP Scan

The NMAP (Network Mapper) Scan feature and gets information of the enabled ports and services of the device with the IP selected by the user.

10.2.4- Speed Test

This function attempts to connect to the server, checks the DHCP protocol and the connection to the Internet. Then, the MOSAIQ6 makes a download and upload speed test.

10.2.3.1.- Main window

Orange icon while the test is running
Green icon if the speed is ok
Red icon if the speed is too low

Type of connection

Tap to start test

Measures of down and upstream speeds

Speed Test Data:
 Status: Test completed
 Public IP: 212.170.98.224 (Movistar)
 Location: Sarenet, Zamudio, Spain
 Latency: 21 ms
 Download: 443.39 Mbps
 Upload: 242.27 Mbps



11. Drive Test

The Drive Test feature activates the GPS automatically. This is a suitable function to detect possible signal coverage problems in a specific area and find out what's causing it.

The screen corresponding to this feature is Mosaic3+1 type. This configuration has 4 widgets. All the widgets are user-configurable.

11.1.- Main window

Tap on the top bar to select the widget feature

Double-tap to see the feature screen in full screen


Select channels to measure

Stop the test


Pause/Run the test

Drive Test Data:
 Status: Running
 GPS Status: LOCKED
 #Channels: 3
 #Satellites: 20
 #Iterations: 83
 Date: 11/06/2019 12:47
 Time: 00:06:56
 Next Measure: 00:00:04
 Longitude: -8.568417 W/E
 Altitude: 188 m
 Speed: 0 km/h
 Locked: 00:06:40
 Power: 78.6 dBmV
 C/N: 49.1 dB
 MER: 37.1 dB
 CBER: <1.0E-6
 VBBER: <1.0E-8

When you tap on "Sel Channels", a pop-up window will show all the plans of the selected channel plan, so you can select those that you want to check in the drive test:

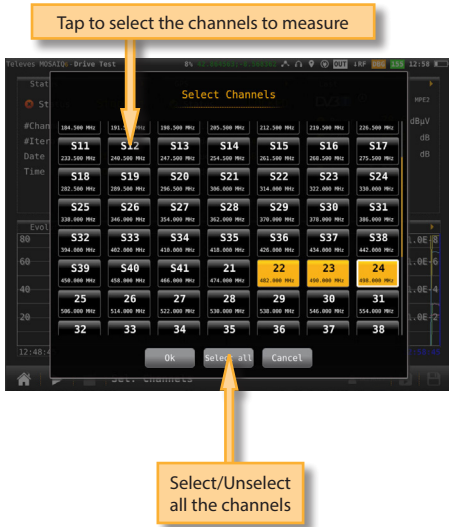

Once you tap on the Run button, you must select the name of the Drive Test File and the time interval between two consecutive measurements:

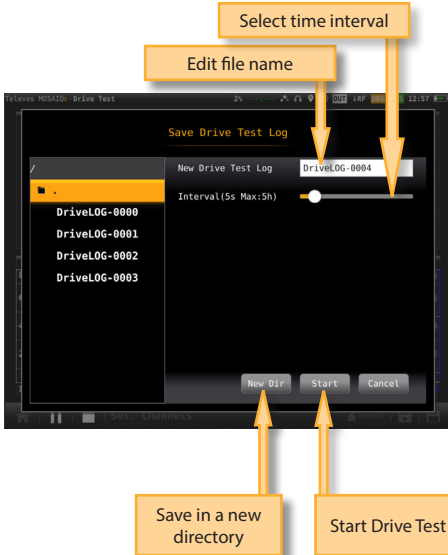

Note that, if the time necessary to perform the measurements on all the selected channels is greater than the time interval, the time between one iteration and the next one will be the minimum necessary to perform the measurements in all the selected channels.


11.2.- Features

This section explains all the features available to visualize in Network Tools function.

11.2.1- Status

This function shows the current status of the test.

11.2.1.1.- Main window

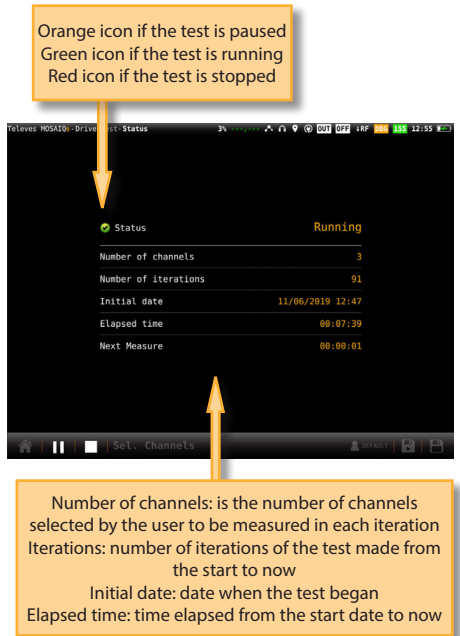

11.2.2- GPS

This function shows all the information of the GPS.

11.2.2.1.- Main window

Green icon if the GPS is locked
Red icon if the GPS is unlocked




Number of satellites is the number of locked satellites
Latitude, Longitude, Altitude: GPS measures
Locked: is the time elapsed since the last time the GPS is locked

11.2.3.- Last

This function shows the current measurements obtained by the HEXYLON during the drive test.

11.2.3.1.- Main window

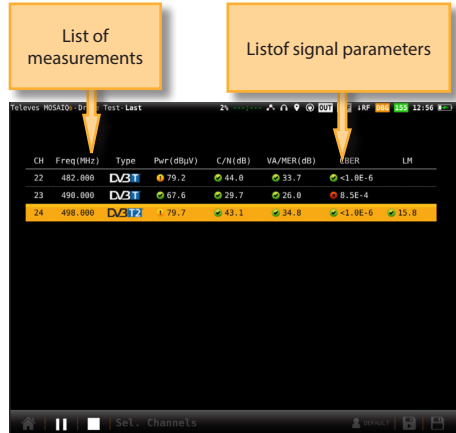

11.2.4- Evolution

This function shows the time evolution of the selected channel measurements obtained by the HEXYLON during the drive test, as well as the current measurements in all the channels. The window is similar to the one of the section 6.4.3.- Measurements

11.2.4.1.- Main window




History of the measurements of the selected channel. Drag to move the blue mark




12. LOGS


The MOSAIQ6 saves two types of measurements files: LOGs and MacroLOGs.

A **LOG** saves all the measurements on the screen, as well as a screenshot. To save a LOG, tap on the icon  in the bottom bar.

A **MacroLOG** is a scheduled measurement that the meter repeats automatically in a time interval selected by the user.

To schedule a MacroLOG tap on icon  in the bottom bar.

Then a popup window will be open, where you can select the time interval. Then tap on the Start button:

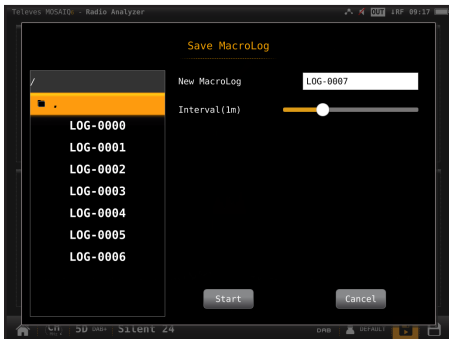

The meter makes and saves the measurements in each specified time interval until the user taps on Stop button.

Tap on Stop to stop the MacroLOG



The LOGs feature allow us to see all the LOGs and MacroLOGs stored in the meter.

12.1.- Main window



Stored LOGs Tap to select

Two views: Measurement and screenshot

Saves LOG in USB memory

Creates a new directory

Renames LOG


Deletes LOG

For each LOG, there are two views:

- Measurement: shows a list with all the measurements
- Screenshot: shows a screenshot of the meter exactly

as it is at the measurement time.

If you select a MacroLOG, you can also select the measurement iteration:

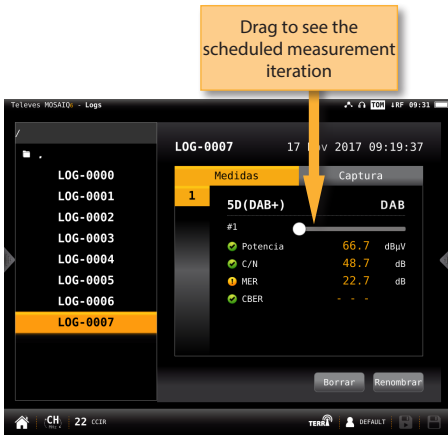

Web application

To access your MOSAIQ6 web application, you must type the IP of your meter in the address bar of your web browser (Chrome recommended).

To know the IP of your meter, you must access to the top menu and select Network feature (see section *Settings in Top menu*).

The first time that you access to the web application you must use the following user and password:

User: admin

Password: admin

Then the web application will be open, showing the Resume window:





1.- Measurements

This feature shows all the LOGs and MacroLOGs stores in the meter.

There are two display modes:


- Calendar: the measurements are shown grouped by date in a calendar:

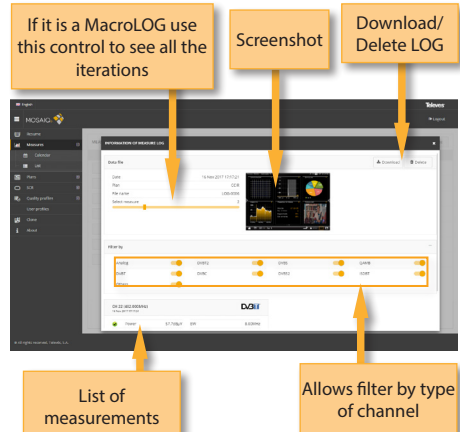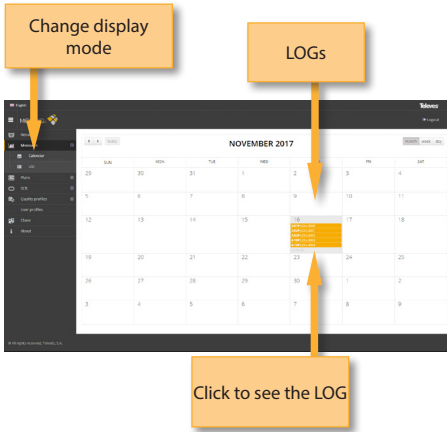

•List:



If the MacroLOG has, in addition, GPS information, you can see all the measurements iterations placed in a map in the position where they was made, so you have a detailed mapping and coverage analysis.

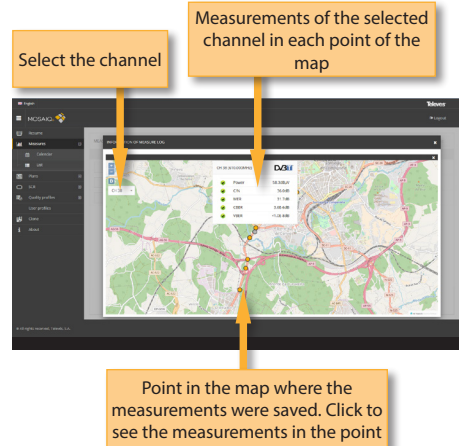

Once the LOG is selected, we see a window with all the information:

Using the buttons placed at the top right of the screen, you can remove the selected LOGs or download them to your computer in .xls format (it will be generated a .xls file for each LOG and they all will be downloaded together in a .zip file).

2. Plans

In this window, you can see all the channel plans of your MOSAIQ6.


They are grouped in several categories: Terrestrial, Satellite, DAB, Customer, and IPTV.

The Terrestrial, Satellite and DAB channel plan are


the standard channel plans of the corresponding band.

These plans can be removed from the meter, but they can not be edited. However, you can make a copy of one of them to build a new customer channel plan from it.


The duplicated plans will appear in the Customer list automatically..

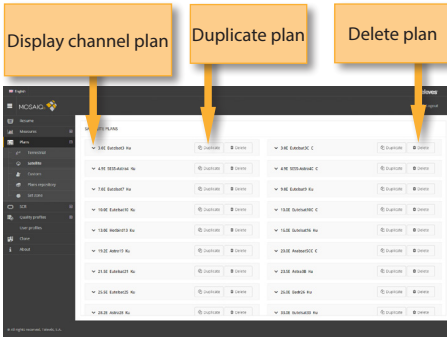


Customer channel plans can be edited:

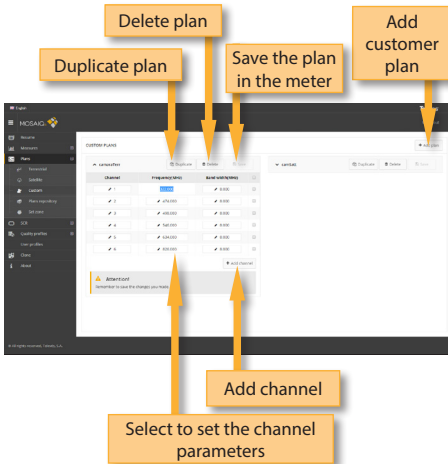


MOSAIQ6 has no factory IPTV channel plan. The user must create his own IPTV channel plans. You can do it adding IPTV channel one by one, or importing it from a .m3u file.

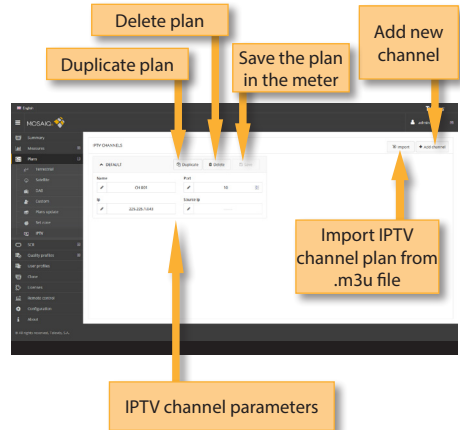

When the user select to import an IPTV channel plan from a .m3u file, the web app will ask you to select the file:

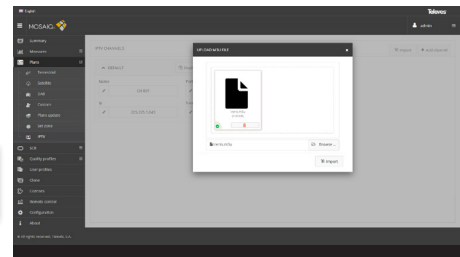


In this section, the user can also update the channel plans to the latest version saved in our server.

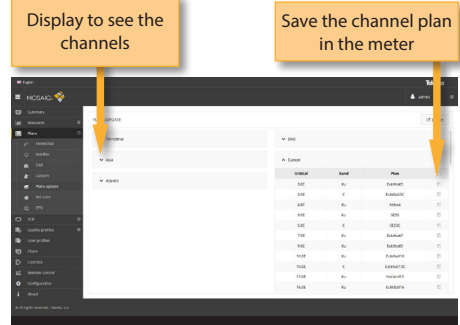

The application also allows to configure the channel plans according to the geographic area you will use the meter.

The user can select the channel plans using the feature Repository. In this window you can see all the channel plan grouped by zones.

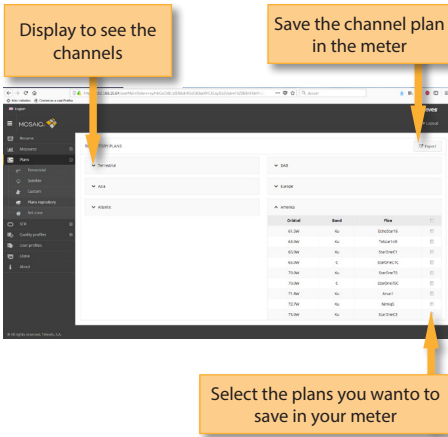


You can also upload to your meter the channel plans of a geographical zone automatically. To do that use the feature Set zone. In this window you can see a map of the world, and you can select the area where you will use the meter by clicking on it. With this and considering the language selected in your meter, the MOSAIQ6 will select automatically the channel plans both in terrestrial and satellite bands.




3. SCR

In this window, you can setup the multiswitches. The H30FLEX includes a list of multiswitches by default, but you can add more or edit any of the existing ones.

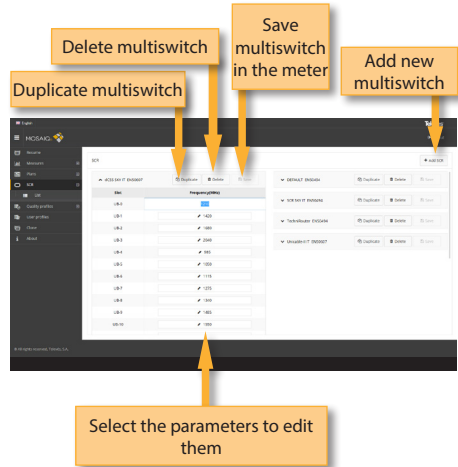


4. Quality profiles

Using the web application you can add new quality profiles. The MOSAIQ6 has two predefined quality profiles (head-end and outlet) that can not be edited, but they can be duplicated. The duplicated quality profiles are saved in the custom quality profiles, and the custom quality profiles can be edited.

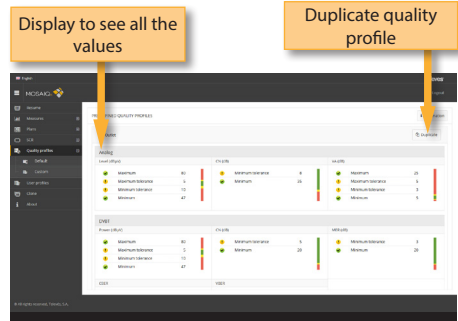

Custom quality profiles can be edited:

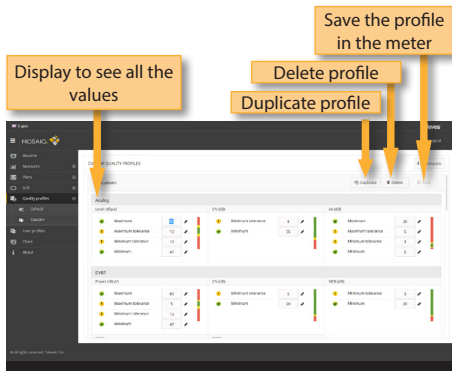


6. Antenna profile

Using the web application you can add new antenna profile to your MOSAIQ6, to be used in in field strength measurement. See section *Inputs/Outputs* in *Top Menu* chapter.

The antenna profile will load from a .xlsx file with two columns: frequency (in MHz) and K factor (in dB).


Drag and drop or select .xlsx file

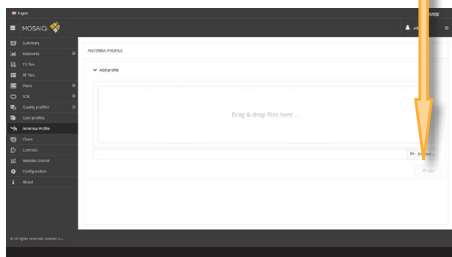

5. User profiles

Using the web application you can add new user profiles. The Hexylon has one pre-defined user profile (named Default) that is configured automatically according to the geographical area selected by the user.

For each user profile, the user must select the band (or bands) that he or she wants to use in that profile, as well as the channel plan for each band other appropriate parameters, depending on the band.

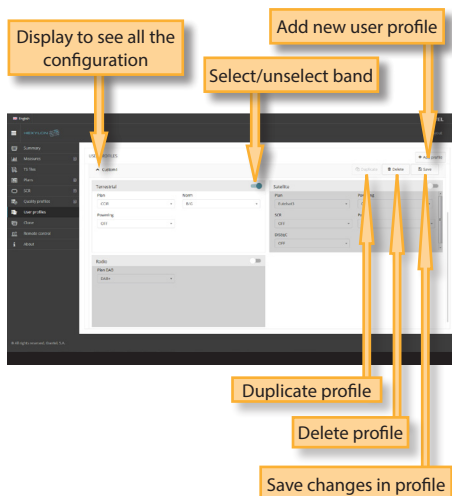


7. Clone

Using this feature it is very easy to have the same configuration in all your Hexylon meters.

You only have to export the configuration of the Hexylon that you want to copy, using the Export feature. So, the configuration will be saved in a file on your computer.

Then, connect other Hexylon where you want to copy the configuration to and select the Import feature.

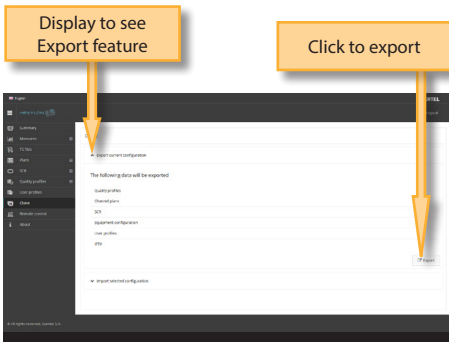

8. Licenses

Please contact the agents of our comercial network to purchase the license you wisht at any moment. You will receive an e-mail with an attached file that you must save in yur computer. Then select this feature to activate the license by dragging the file into the corresponding box that is shown on the screen, or find the file in your computer. Finally click on the Update button, the license will be activated in your **MOSAIQ6**.

9. Remote control


Using this feature you can control your Hexylon remotely. For this to work, it is necessary that the Hexylon and the computer are connected to the same LAN. To access to this feature you must enter the password admin in the right top part of the window. Then you will see the screen of the Hexylon in your computer:



Using the mouse you can control the Hexylon as with the hands, except the pinch/spread gestures.

10. Configuration

This feature allows you to restore the factory settings of your MOSAIQ6. When you do that, all the measurements, TS recordings, channel plans, quality and user profiles stored in your meter will be deleted.

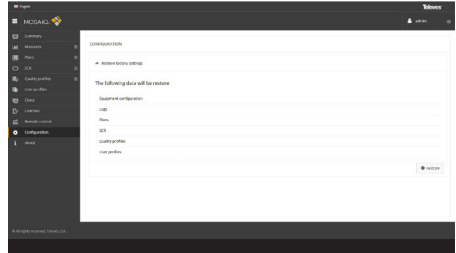


Cloud Repository

By registering your MOSAIQ6 on our website (see *Before Starting* section), you will be able to benefit from the cloud repository.



To access your repository in the cloud, just put the following IP address in the bar of your browser: XXXXX.XXX

To access you must use the username and password you used for registration on our website.

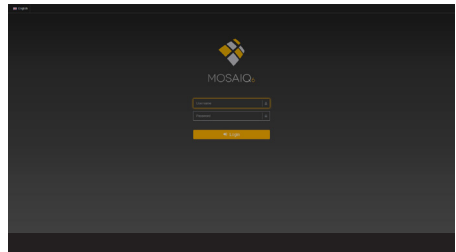

Once you enter your repository, you will see a list of all the meters you have registered:

Using the menus on the left of the window, you can view all the data for the selected meter, but you cannot edit it:

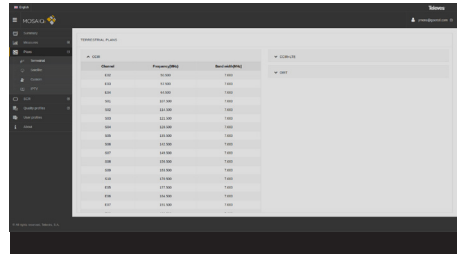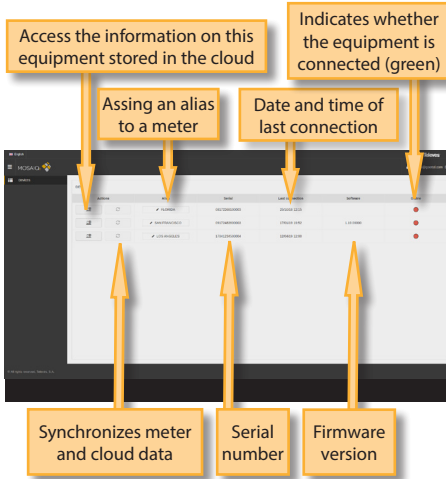

EN

By clicking on one of the buttons on the left of the list, you can access the information in the cloud of that meter (it is not necessary for the device to be connected). You will then see a window similar to that of the Web Application (see *Web Application* section):



Error messages

LOW BATTERY

Indicates that the battery is about to finish. The battery icon is red now. It is recommended to connect the meter to the external power source.

LOW BATTERY

Shutting down Some time after the LOW BATTERY message appears (time varies depending on the functions used), it will appear this message. If the meter is not connected to the external power source, it will switch off.

BAD POWER

Unplug power source This message appears when the meter is connected to an external power source that does not supply it the right power. Please, use only the power source provided with the H30FLEX.

SHORT-CIRCUIT

Check installation

This message appears when the meter detects a short-circuit at the RF input. It is recommended to check the installation to find out why the short circuit is produced.

DC OUTPUT LIMIT EXCEED

Switch DC OUTPUT off

This message appears when the meter detects an excessive consumption from the device that is being powered. It is recommended to turn off the powering feature of the MOSAIQ6.

DC AT RF INPUT

Check installation

This message appears when the meter detects DC at the RF input that is not generated by the MOSAIQ6. It is recommended to check the installation.

Maintenance

Always disconnect the unit before cleaning. Use only a mild solution of detergent and water applied with a soft damp cloth. Dry thoroughly before use.

Do not use aromatic hydrocarbons or chlorinated solvents. These products may damage the unit.

Do not use alcohol or alcohol based products on the front panel, especially the display.

These products may damage the unit.

Technical support

For any questions, contact Technical Support at www.televes.com

Before contacting Technical Support for repair, read the manual to ensure proper use and attempt to RESET the unit to clear any problems.

Repair service

Do not return the unit without first contacting Televes Technical Support.

If the unit needs to be returned, Televes will arrange for free shipping. The unit will need to be appropriately packed for shipping.

In compliance with IATA Regulations, when using our shipping service follow these instructions:

- Label the package.
- The equipment should fit as snugly as possible in the box. It is recommended to use the original packing materials.
- Attach the precaution label to the package.



Failure to comply with these shipping requirements may result in the shipping agent rejecting the package.

Warranty

Televes warrants, only to the original Purchaser, for a period of one (1) year from the date of original purchase, unless otherwise specified.

For the battery, due to the nature of the product, the warranty period is six (6) months.

Keep the purchase invoice to determine the warranty start date.

During the warranty period, Televes S.A. assumes any defect in materials or workmanship.

This warranty excludes any inoperability resulting from improper use, wear, service or repair performed by any third party not authorized, catastrophes or any cause unrelated to Televes S.A.

European technology **Made in**  **EU**rope